


SLIP Indicator Light Circuit

CIRCUIT DESCRIPTION

The SLIP indicator blinks during VSC operation.

WIRING DIAGRAM

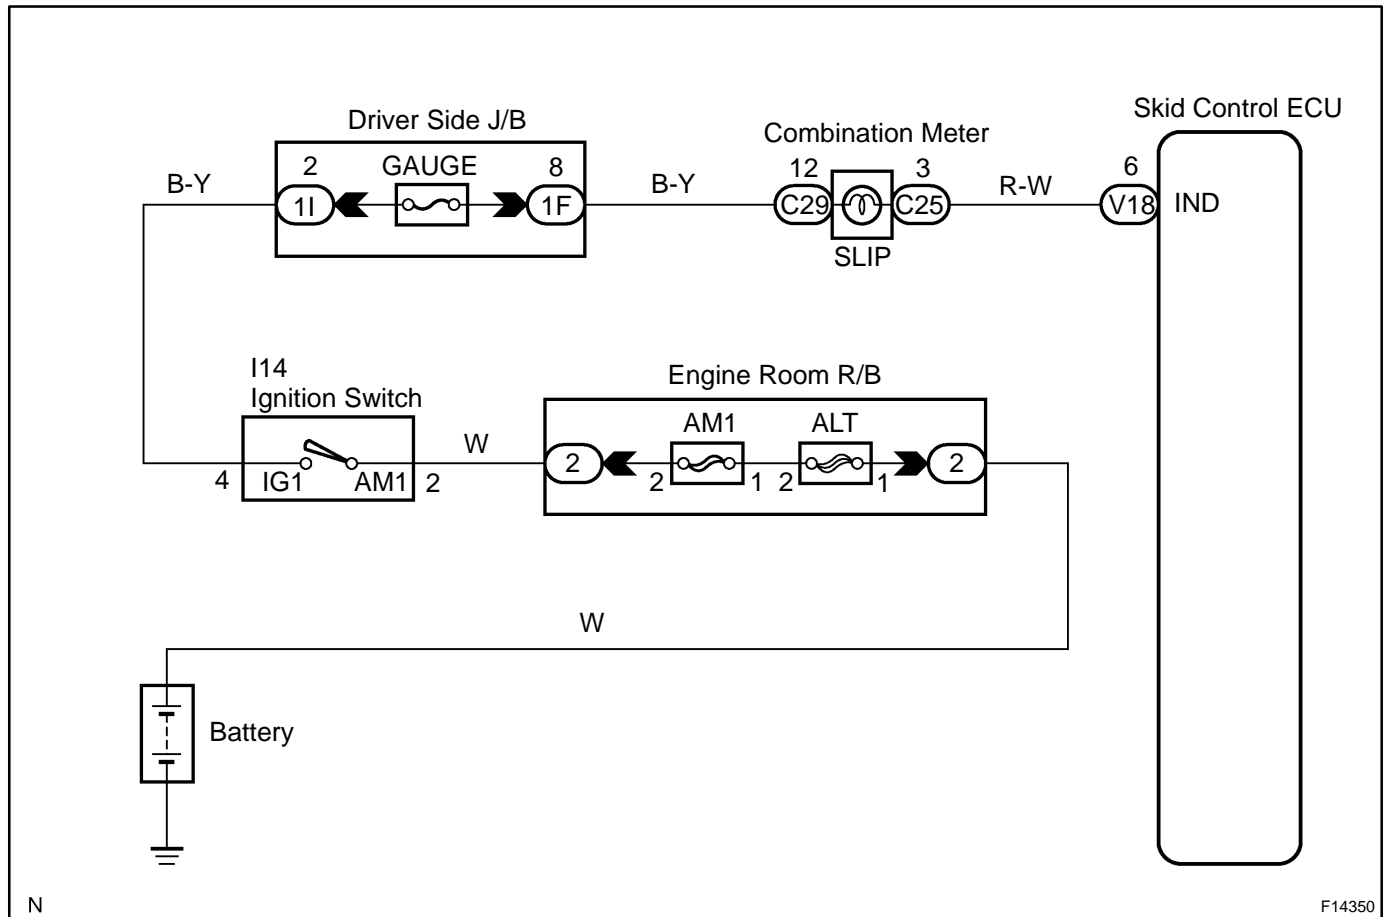

INSPECTION PROCEDURE