


## VSC TRAC Warning Light Circuit

### CIRCUIT DESCRIPTION

If the ECU stores DTC, the VSC TRAC warning light lights on the combination meter.

### WIRING DIAGRAM

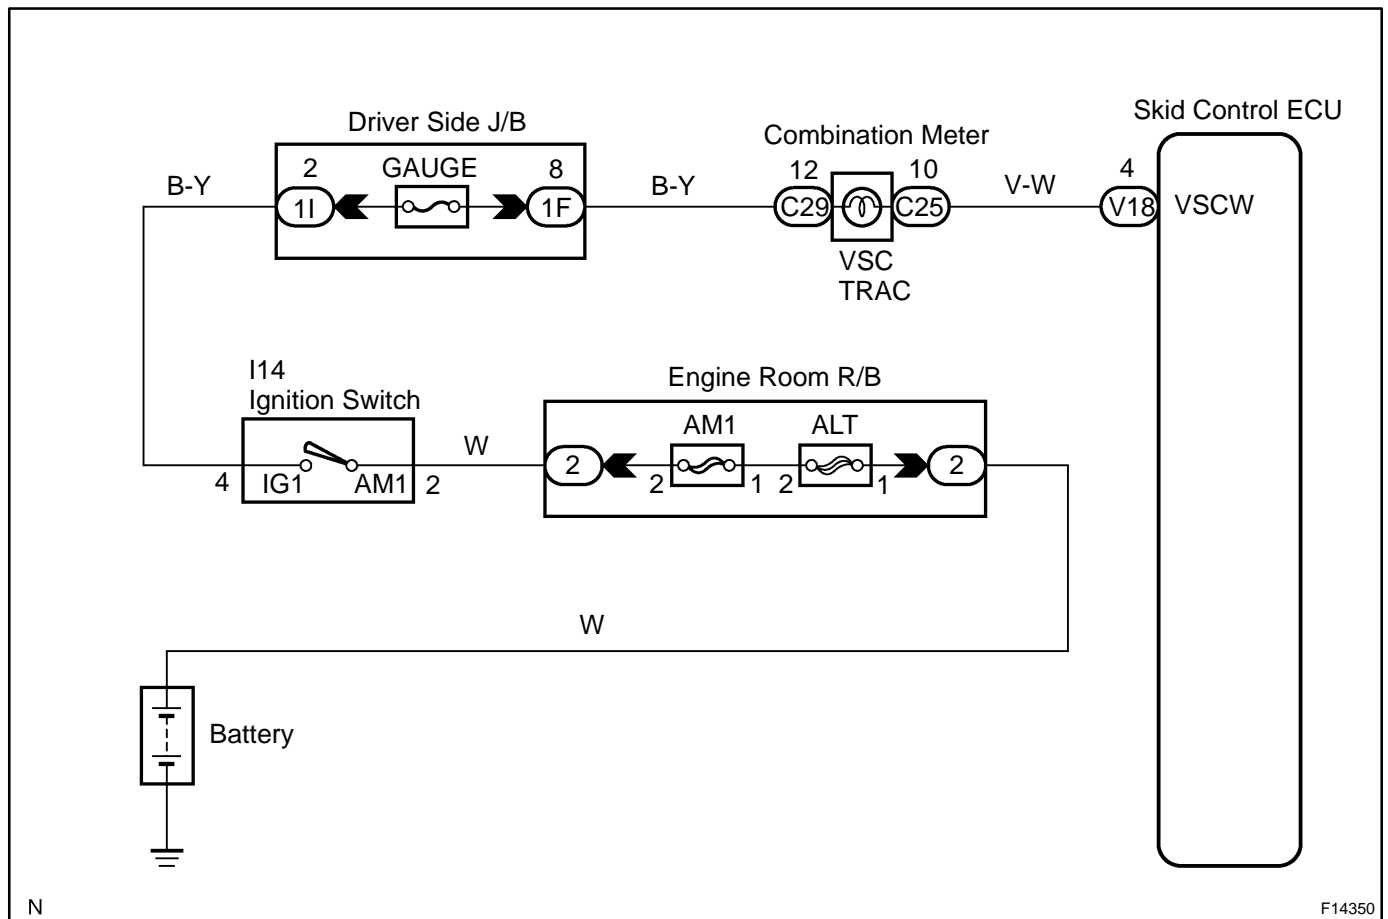

## INSPECTION PROCEDURE

### HINT:

Start the inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using the hand-held tester.

1	<b>Check operation of VSC TRAC warning indicator.</b>
---	---

### PREPARATION:

- (a) Connect the hand-held tester to DLC3.
- (b) Turn the ignition switch ON and push the hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the hand-held tester.

### CHECK:

Check that "ON" and "OFF" of the VSC TRAC warning light can be shown on the combination meter by the hand-held tester.

OK

**Check and replace skid control ECU.**

NG

2	<b>Is DTC output for VSC?</b>
---	-------------------------------

YES

**Repair circuit indicated by the output code.**

NO

3	<b>Check for open and short circuit in harness and connector between skid control ECU and VSC TRAC warning light (See page <a href="#">IN-28</a> ).</b>
---	---

NG

**Repair or replace harness or connector.**

OK

