

## DIAGNOSTIC TROUBLE CODE CHART

If a DTC is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the page given.

DTC No. (See Page)	Detection Item	Trouble Area	MIL *1	Memory
P0500 (DI-179)	Vehicle Speed Sensor Malfunction	<ul style="list-style-type: none"> <li>• Open or short in No. 1 vehicle speed sensor circuit</li> <li>• No. 1 vehicle speed sensor</li> <li>• Combination meter</li> <li>• ECM</li> <li>• Automatic transmission (clutch, bracket or gear etc.)</li> </ul>	●	○
P0710 (DI-182)	Transmission Fluid Temperature Sensor Malfunction	<ul style="list-style-type: none"> <li>• Open or short in ATF temperature sensor circuit</li> <li>• ATF temperature sensor</li> <li>• ECM</li> </ul>	●	○
P0750 (DI-184)	Shift Solenoid "A" Malfunction	<ul style="list-style-type: none"> <li>• Shift solenoid valve No. 1 is stuck open or closed</li> <li>• Valve body is blocked up or stuck</li> </ul>	●	○
P0753 (DI-186)	Shift Solenoid "A" Electrical	<ul style="list-style-type: none"> <li>• Open or short in shift solenoid valve No. 1 circuit</li> <li>• Shift solenoid valve No. 1</li> <li>• ECM</li> </ul>	●	○
P0755 (DI-184)	Shift Solenoid "B" Malfunction	<ul style="list-style-type: none"> <li>• Shift solenoid valve No. 2 is stuck open or closed</li> <li>• Valve body is blocked up or stuck</li> </ul>	●	○
P0758 (DI-186)	Shift Solenoid "B" Electrical	<ul style="list-style-type: none"> <li>• Open or short in shift solenoid valve No. 2 circuit</li> <li>• Shift solenoid valve No. 2</li> <li>• ECM</li> </ul>	●	○
P0770 (DI-190)	Shift Solenoid "E" Malfunction	<ul style="list-style-type: none"> <li>• Shift solenoid valve SL is stuck open or closed</li> <li>• Valve body is blocked up or stuck</li> <li>• Lock-up clutch</li> </ul>	●	○
P0773 (DI-192)	Shift Solenoid "E" Electrical	<ul style="list-style-type: none"> <li>• Open or short in shift solenoid valve SL circuit</li> <li>• Shift solenoid valve SL</li> <li>• ECM</li> </ul>	●	○
P1520 (DI-195)	Stop Light Switch Circuit Malfunction	<ul style="list-style-type: none"> <li>• Short in stop light switch signal circuit</li> <li>• Stop light switch</li> <li>• ECM</li> </ul>	●	○
P1700 (DI-196)	Speed Sensor No. 2 Malfunction	<ul style="list-style-type: none"> <li>• Open or short in No. 2 vehicle speed sensor circuit</li> <li>• No. 2 vehicle speed sensor</li> <li>• ECM</li> </ul>	●	○
P01760 (DI-200)	Linear Solenoid for Line Pressure Control Circuit Malfunction	<ul style="list-style-type: none"> <li>• Open or short in shift solenoid valve SLT circuit</li> <li>• Shift solenoid valve SLT</li> <li>• ECM</li> </ul>	●	○
P1780 (DI-203)	Park/Neutral Position Switch Malfunction	<ul style="list-style-type: none"> <li>• Short in park/neutral position switch circuit</li> <li>• Park/neutral position switch</li> <li>• ECM</li> </ul>	●	○
P1782 *2 (DI-208)	Transfer L4 SW Circuit Malfunction	<ul style="list-style-type: none"> <li>• Transfer L4 position switch</li> <li>• Transfer L4 position switch circuit</li> <li>• ECM</li> </ul>	●	○
P1783 *2 (DI-211)	Transfer N SW Circuit Malfunction	<ul style="list-style-type: none"> <li>• Transfer neutral position switch</li> <li>• Transfer neutral position switch circuit</li> <li>• ECM</li> </ul>	●	○

\* 1: ●...MIL lights up.

\* 2: 4WD only.