


Door Lock Control Switch Circuit

WIRING DIAGRAM

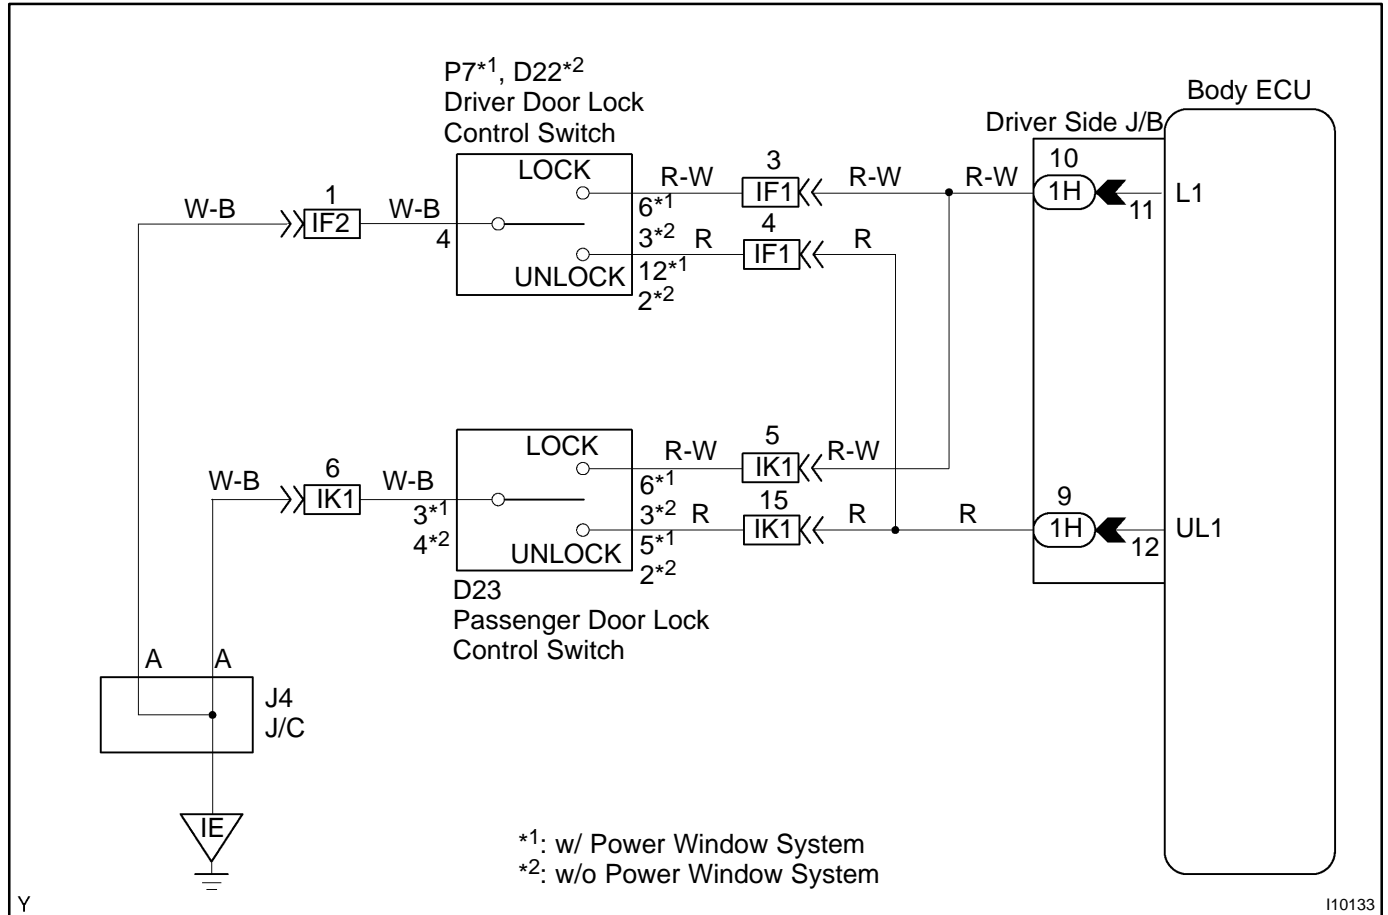

INSPECTION PROCEDURE

| | |
|---|---|
| 1 | Check door lock control switch (See page BE-76). |
|---|---|

NG

Replace door lock control switch.

OK

| | |
|---|--|
| 2 | Check harness and connector between door lock control switch and body ECU (See page IN-28). |
|---|--|

NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-517](#)).