


## Front and Rear Door Courtesy Switch Circuit

### CIRCUIT DESCRIPTION

The door courtesy switch ON when the door is opened and OFF when door is closed.

### WIRING DIAGRAM

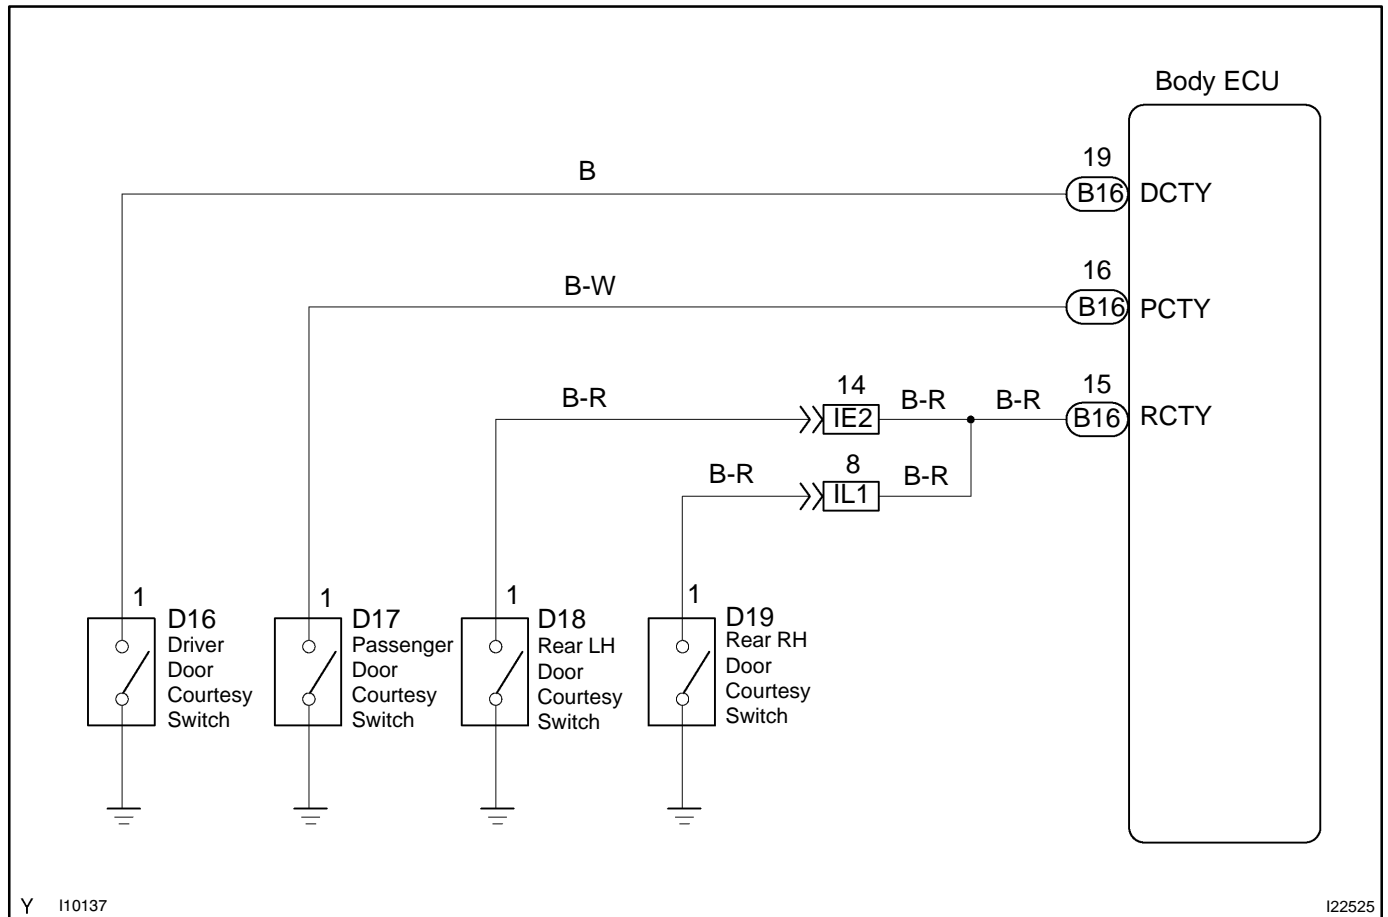

INSPECTION PROCEDURE

1	Check door courtesy switch (See page <a href="#">BE-26</a> ).
---	---

NG

Replace door courtesy switch.

OK

2	Check harness and connector between door courtesy switch and body ECU (See page <a href="#">IN-28</a> ).
---	--

NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-517](#) ).