


## Door Lock Motor Circuit

### WIRING DIAGRAM

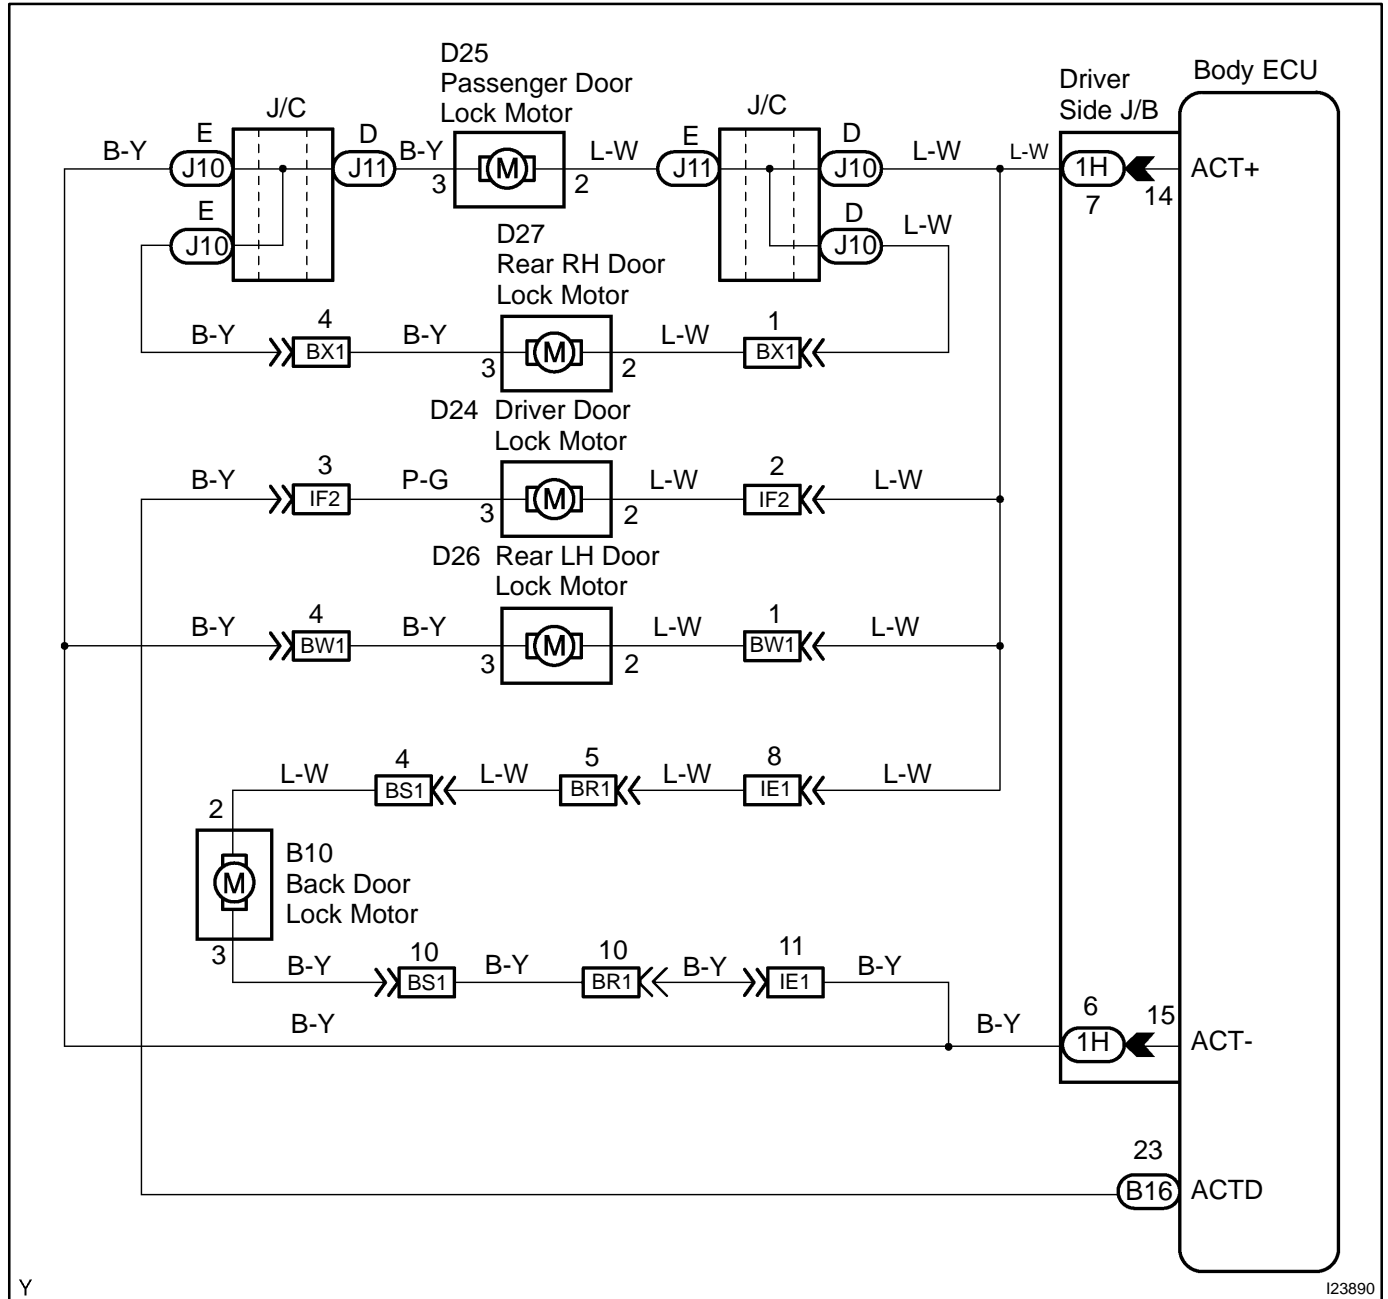

1	Check door lock motor (See page <a href="#">BE-76</a> ).
---	--

**OK**

**Repair or replace harness or connector.**

**OK**

**Check and replace body ECU.**