


Horn Circuit

CIRCUIT DESCRIPTION

The horn is connected to the body ECU and activated by the body ECU during warning of the theft deterrent system and horn switch ON.

WIRING DIAGRAM

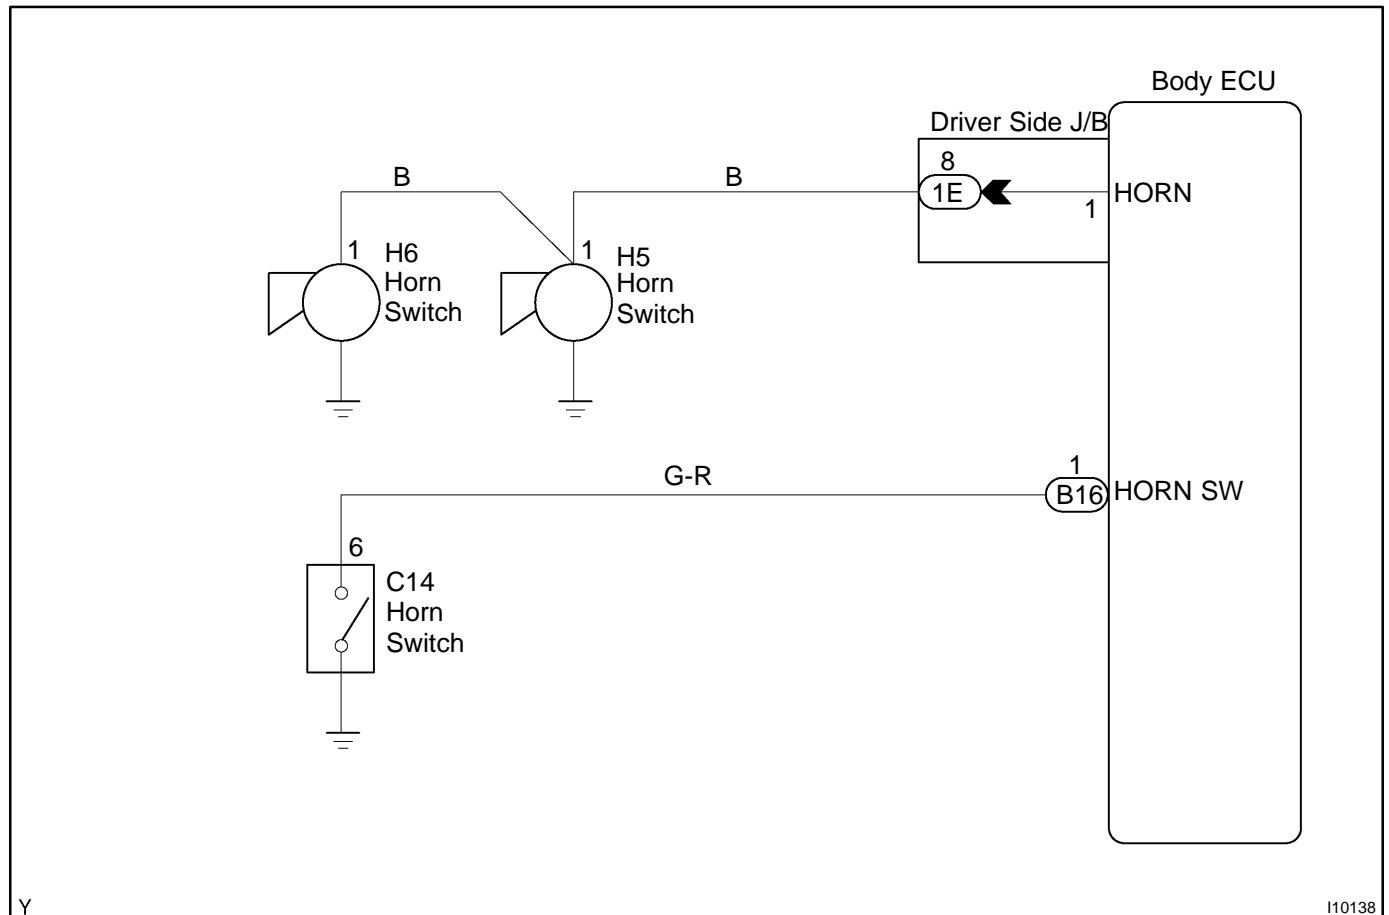

INSPECTION PROCEDURE

