


## Headlight Relay Circuit

### CIRCUIT DESCRIPTION

When the panic signal is received, the control of the headlight relay is performed.

### WIRING DIAGRAM

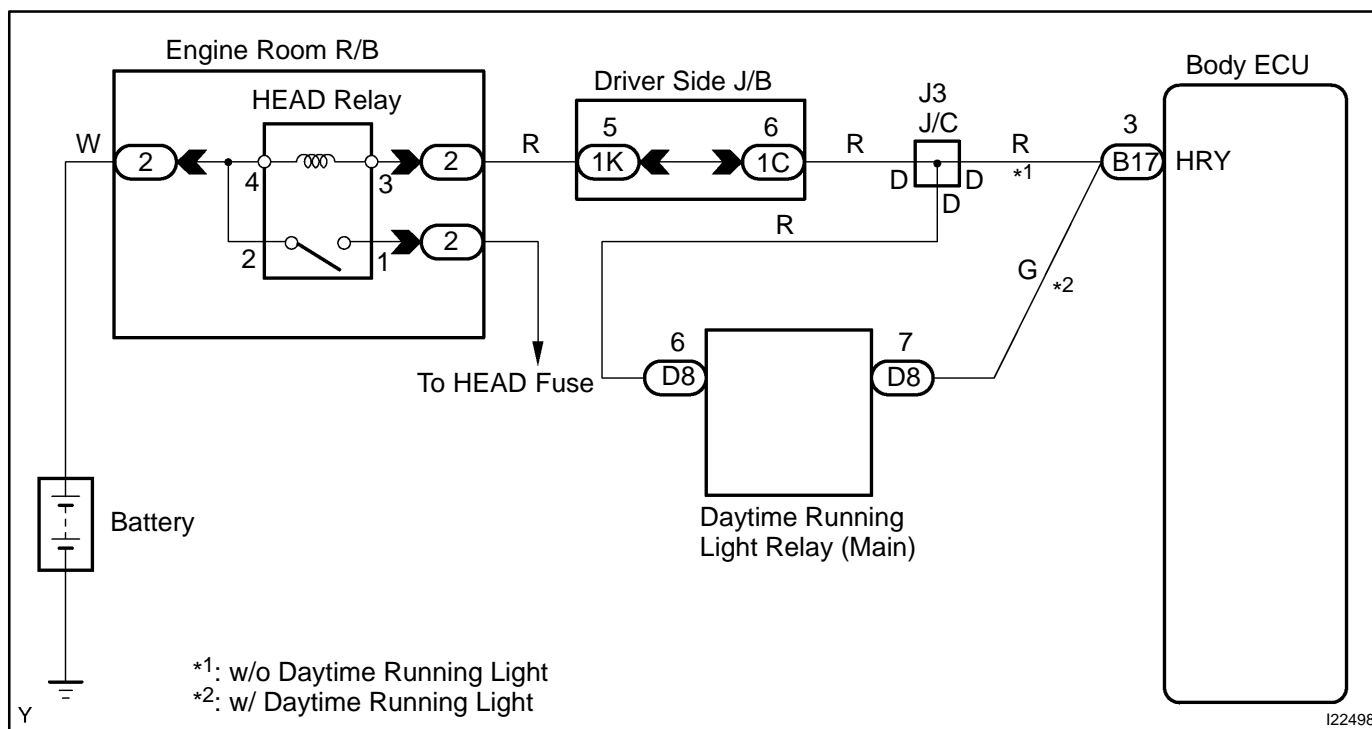

### INSPECTION PROCEDURE

- 1 Check harness and connector between headlight relay (Marking: HEAD) and body ECU, and battery and headlight relay (See page [IN-28](#) ).

NG

Repair or replace harness or connector.

OK

Check and replace body ECU.