


Theft Deterrent Indicator Circuit

CIRCUIT DESCRIPTION

When the theft deterrent system is preparing to set, this circuit lights up the indicator light. When the system has been set, it continually turns the indicator light on for 1 second and turns it off for 1 second, thus blinking the indicator light.

This theft deterrent indicator is connected to the ECM and outputs the key judgment of the immobilizer.

WIRING DIAGRAM

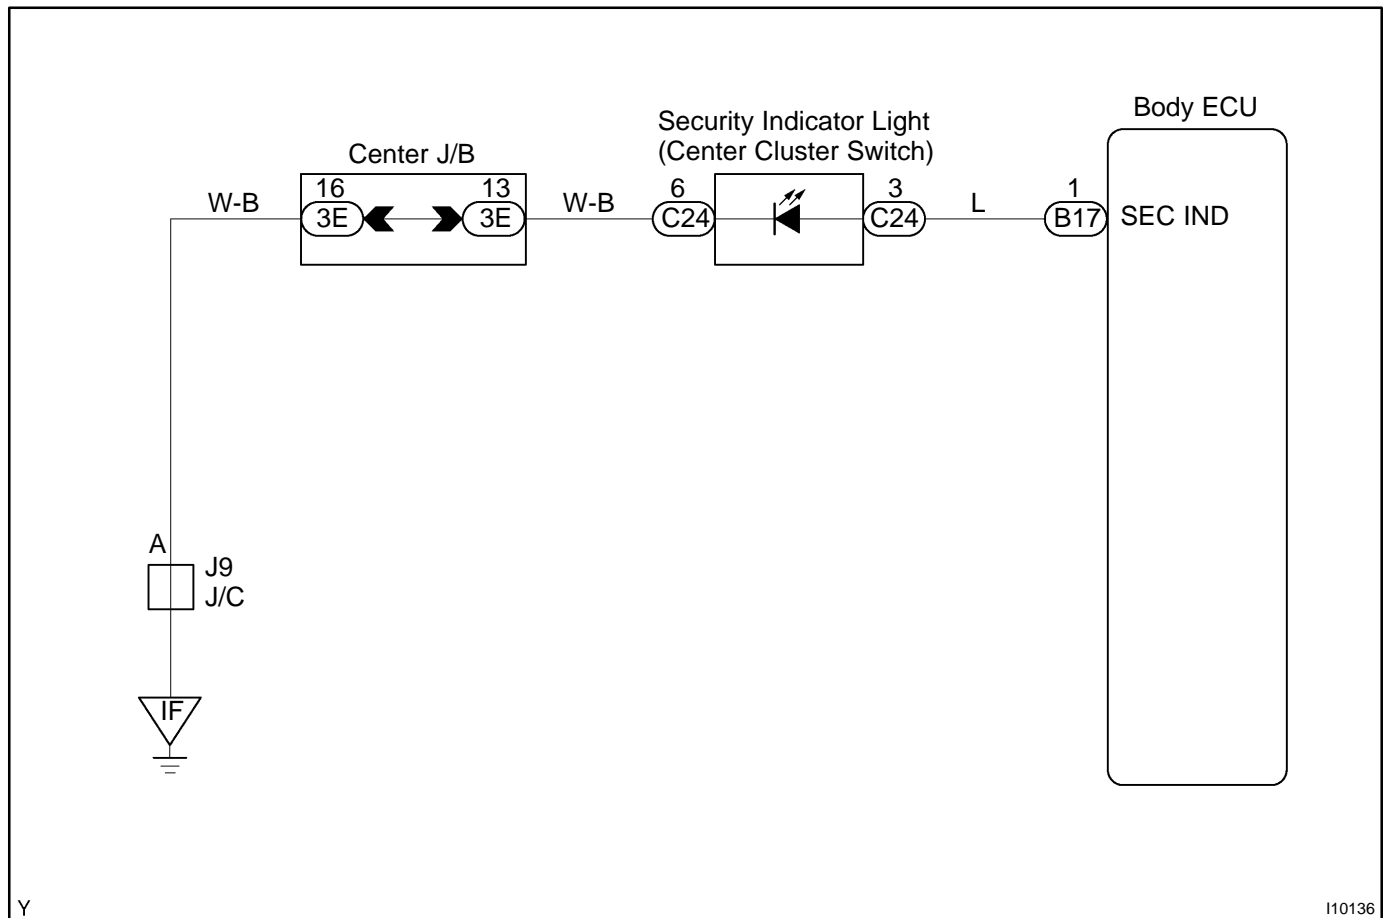

INSPECTION PROCEDURE

1	Check theft deterrent indicator (See page BE-85).
----------	---

NG**Replace theft deterrent indicator.****OK**

2	Check harness and connector between theft deterrent indicator and body ECU, and theft deterrent indicator and body ground (See page IN-28).
----------	---

NG**Repair or replace harness or connector.****OK**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-517](#)).