

PROBLEM SYMPTOMS TABLE

DOOR LOCK CONTROL

Symptom	Suspect Area	See page
Lock or unlock cannot be operated with door lock control switch	3. Door lock control switch circuit (D or P) 4. Body ECU	DI-533 IN-28
Door key linked function does not operate	1. Door key lock and unlock switch circuit (D or P) 2. Body ECU	DI-535 IN-28
Key confinement prevention function does not operate	1. Key unlock warning switch circuit 2. Body ECU	DI-527 IN-28

THEFT DETERRENT SYSTEM

Symptom	Suspect Area	See page
No alerting condition is operated (System cannot be set)	1. Security indicator circuit 2. Key unlock warning switch circuit 3. Courtesy switch circuit 4. Door unlock detection switch circuit 5. Engine hood courtesy switch circuit 6. Back door courtesy switch circuit 7. Back door ECU 8. Body ECU	DI-543 DI-527 DI-539 DI-533 DI-541 DI-562 IN-28 IN-28
Cannot be canceled when ignition switch is ON with a key	1. Key unlock warning switch circuit 2. Ignition switch 3. Body ECU	DI-527 BE-12 IN-28
Cannot be canceled when unlocking the back door with a key	1. Back door courtesy switch circuit 2. Body ECU	DI-562 IN-28
Some of the system does not operate (Headlight does not light up)	1. Headlight relay circuit 2. Body ECU	DI-526 IN-28
Taillight does not light up	1. Taillight relay circuit 2. Body ECU	DI-525 IN-28
Theft deterrent horn or horn does not sound	1. Security horn circuit 2. Horn circuit 3. Body ECU	DI-547 DI-545 IN-28
During warning condition, cannot be canceled by unlocking the door with a key	1. Door key lock and unlock switch circuit 2. Body ECU	DI-535 IN-28
During warning condition, cannot be canceled by unlocking the door with a key (Transmitter)	1. Transmitter 2. Back door ECU 3. Body ECU	BE-93 IN-28 IN-28
During warning condition, cannot be cancelled by turning the ON with a key	1. Ignition switch 2. Key unlock warning switch circuit 3. Body ECU	BE-12 DI-527 IN-28
The system operated for more 60 records	1. Body ECU	IN-28