


Rear Washer Motor Circuit

CIRCUIT DESCRIPTION

Body ECU judges the switch position with the terminal voltage of the wiper and washer switch and runs the wiper motor.

WIRING DIAGRAM

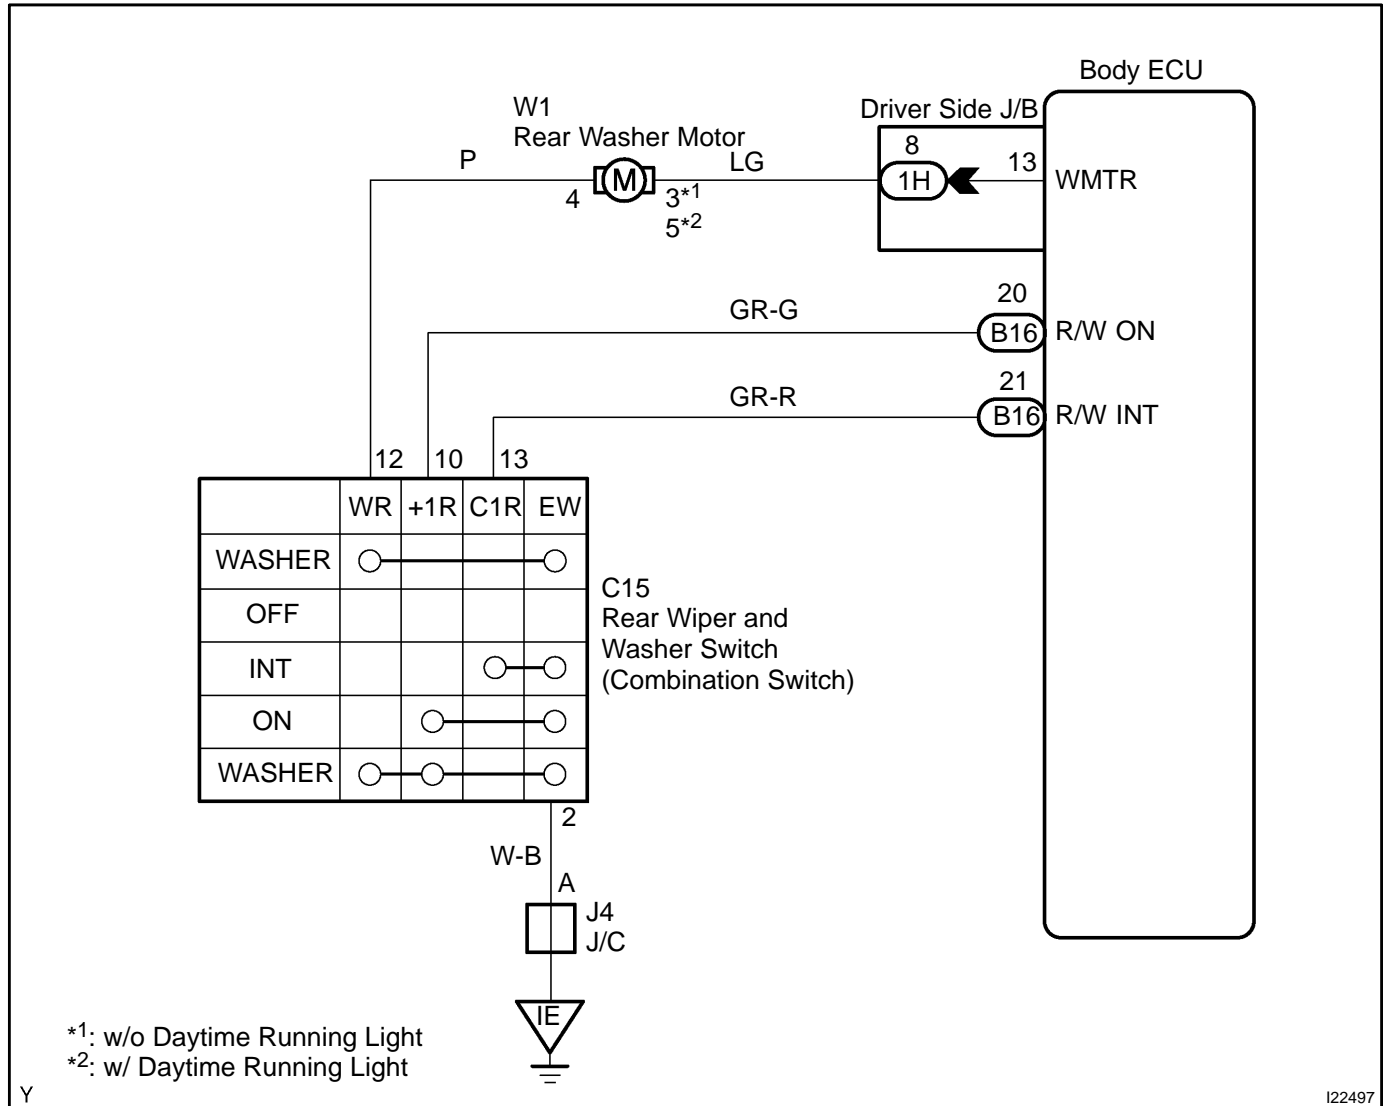

1	Check rear wiper and washer switch (See page BE-34).
---	---


Check rear wiper and washer switch (See page BE-34).

Replace rear wiper and washer switch.



Check rear washer motor (See page [BE-34](#)).

Replace wiper motor.



Check harness and connector between rear wiper and washer switch and body ECU (See page [IN-28](#)).

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-517](#)).