


# Theft Deterrent Horn Circuit

## CIRCUIT DESCRIPTION

During warning of the theft deterrent system, the body ECU activates the theft deterrent horn.

## WIRING DIAGRAM

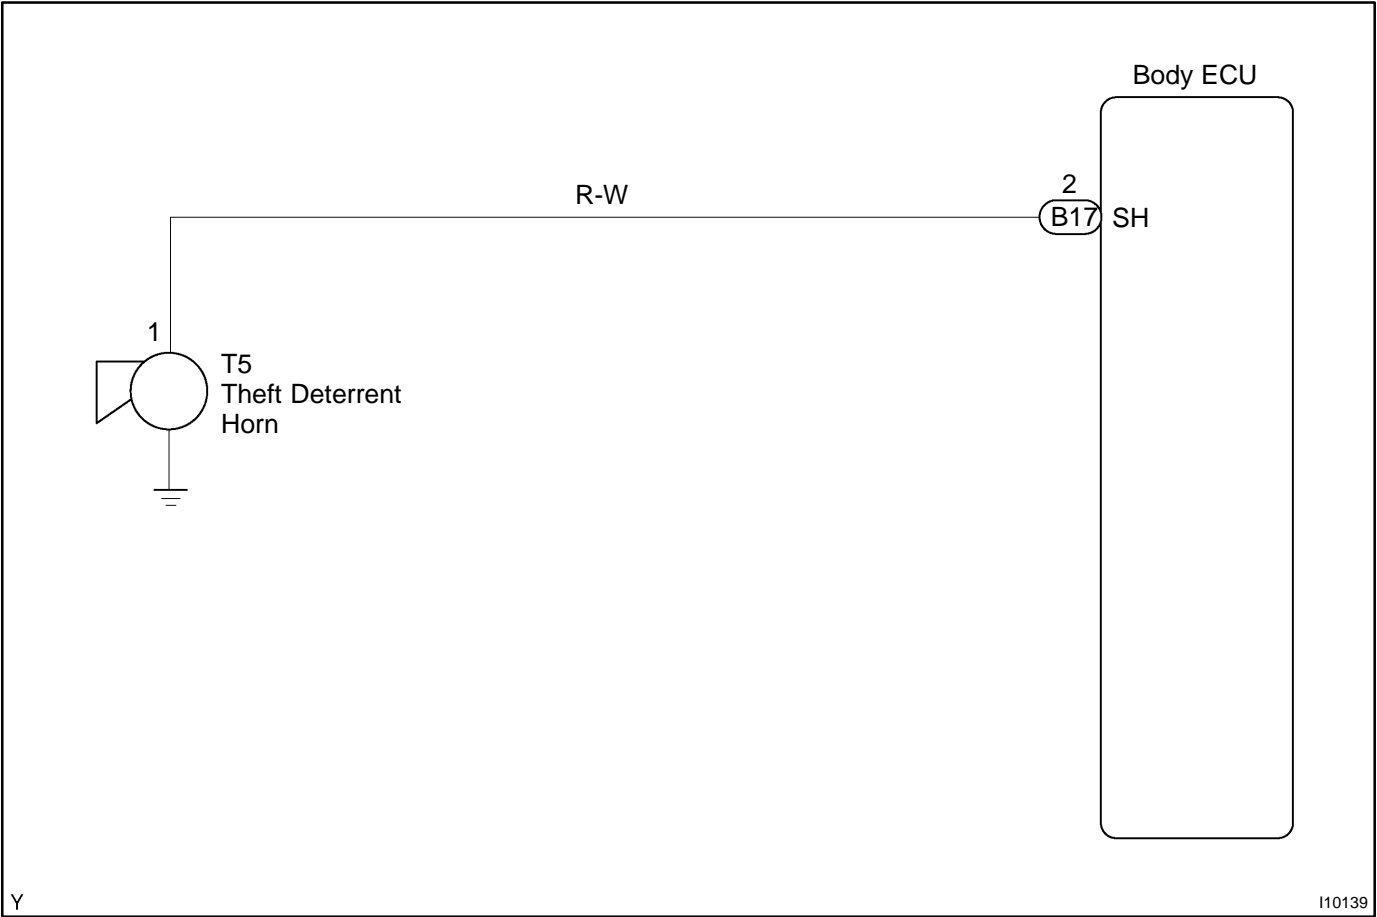

INSPECTION PROCEDURE

1	Check theft deterrent horn (See page <a href="#">BE-85</a> ).
---	---

NG

Replace theft deterrent horn.

OK

2	Check harness and connector between theft deterrent horn and body ECU (See page <a href="#">IN-28</a> ).
---	--

NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-517](#) ).