


Taillight Relay Circuit

CIRCUIT DESCRIPTION

When the panic signal is received, the control of the taillight relay is performed.

WIRING DIAGRAM

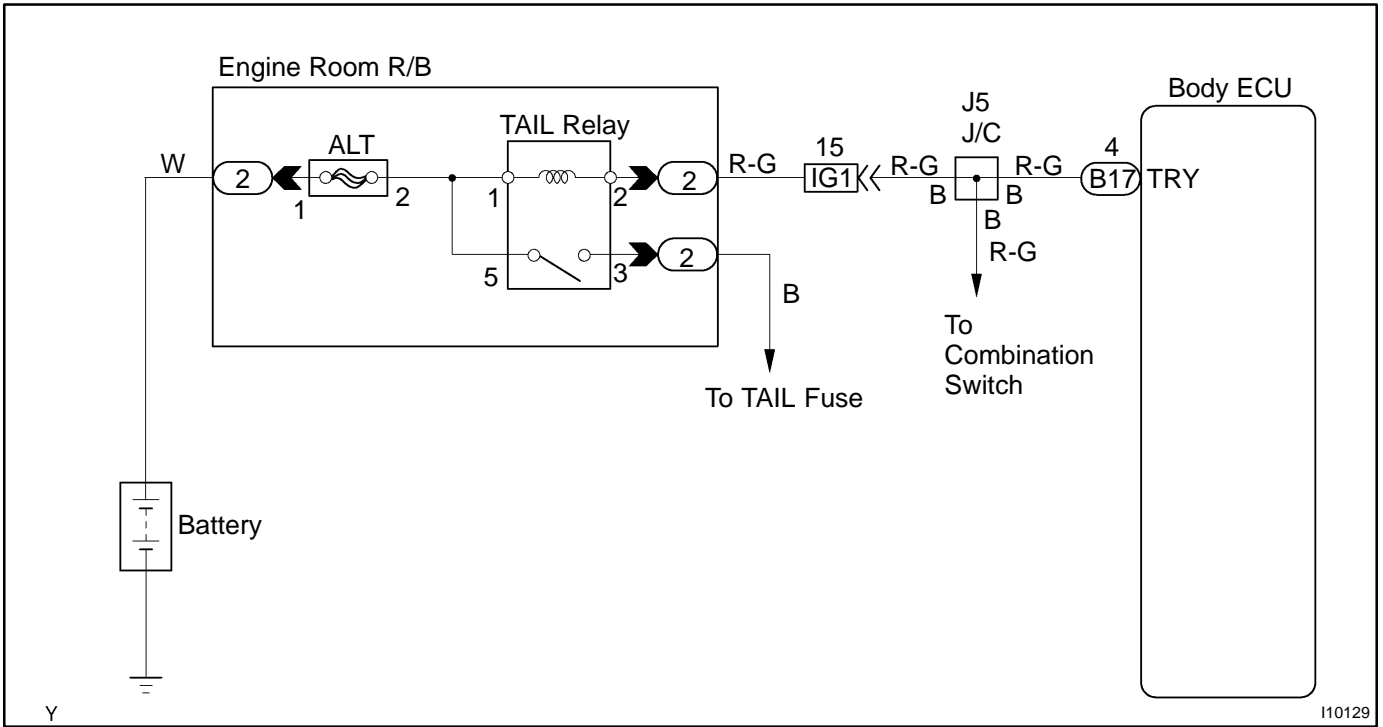

INSPECTION PROCEDURE

1	Check harness and connector between taillight relay (Marking: TAIL) and body ECU (See page IN-28).
OK	
NG	Repair or replace harness or connector.
	Check and replace body ECU.