


Back Door Power Window Switch Circuit

WIRING DIAGRAM

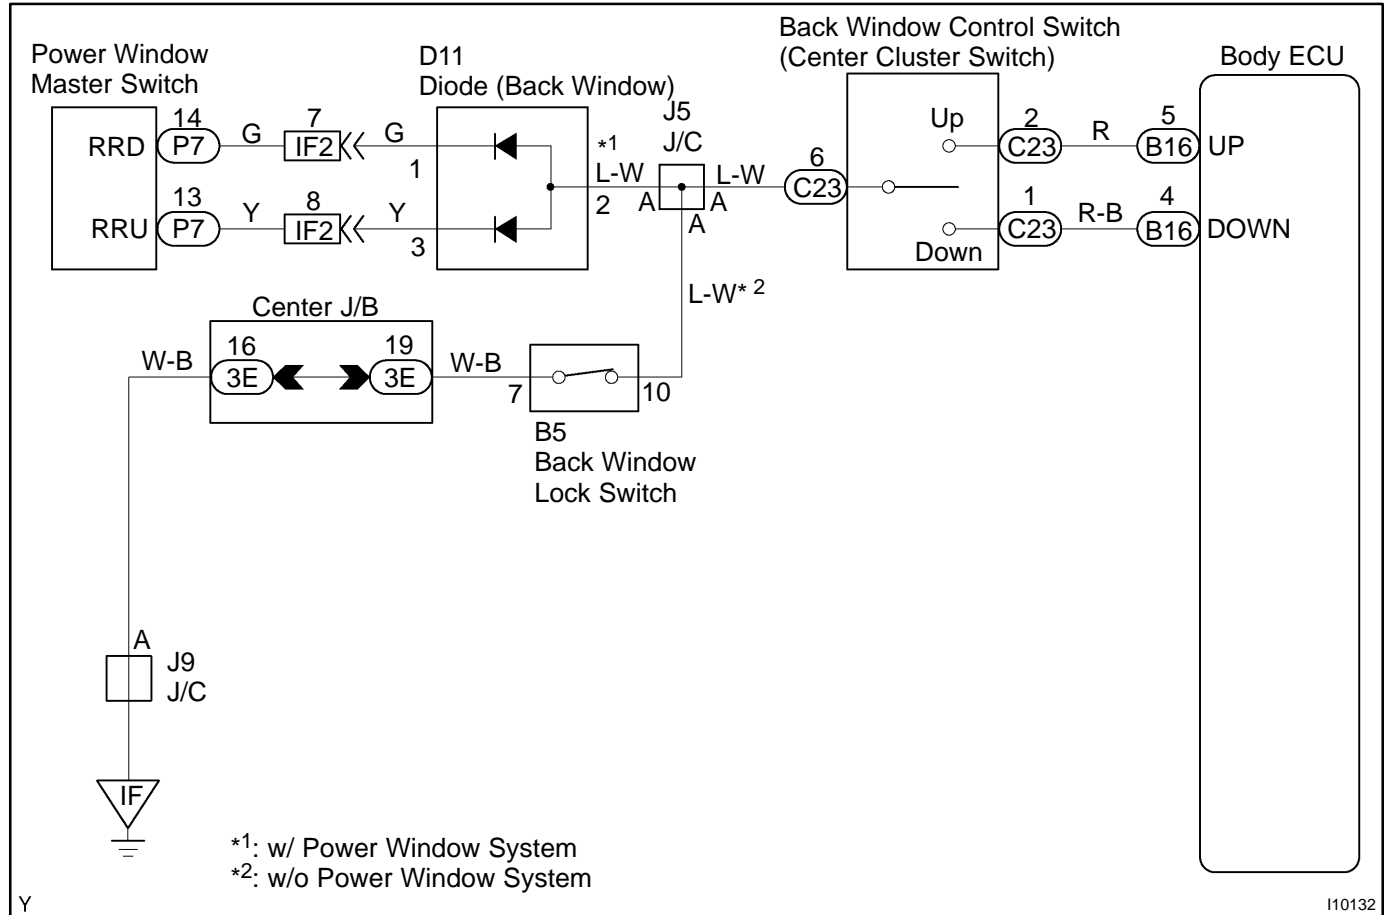

INSPECTION PROCEDURE

1	Check back door power window switch (See page BE-65).
---	------------------------------------------------------------------------

NG

Replace back door power window switch.

OK

2	Check harness and connector between power window switch and body ECU (See page IN-28).
---	---------------------------------------------------------------------------------------------------------

NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-517](#)).