


## Window Limit Switch Circuit

### CIRCUIT DESCRIPTION

This switch functions to turn "OFF" before the top dead center, and ECU reads this "OFF signal resulting in closing the window fully.

### WIRING DIAGRAM

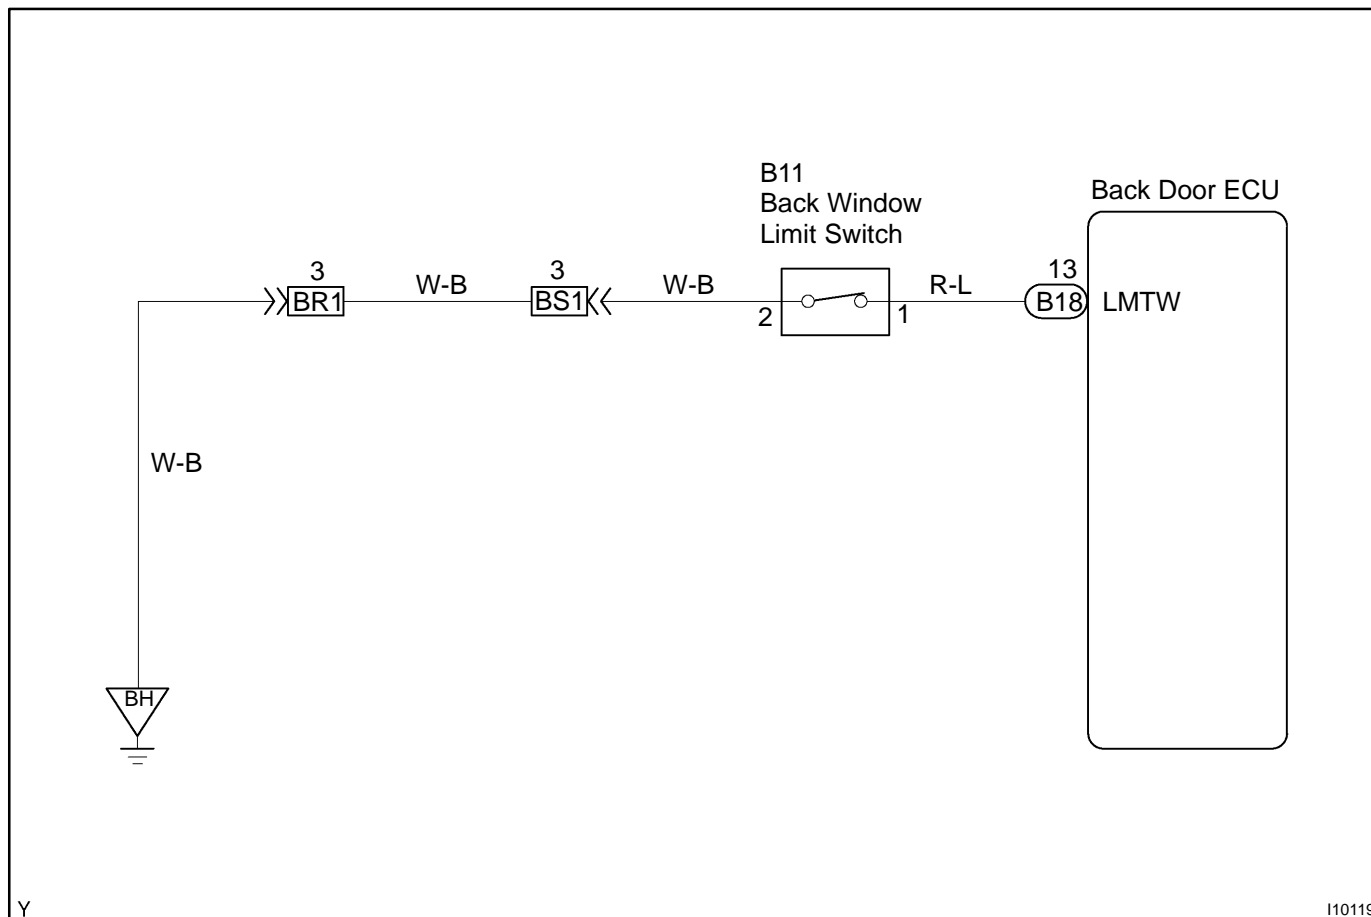

Y

I10119

**INSPECTION PROCEDURE**

1	Check window limit switch (See page <a href="#">BE-65</a> ).
---	--

NG	Replace window limit switch.
----	------------------------------

OK

2	Check harness and connector between window limit switch and back door ECU (See page <a href="#">IN-28</a> ).
---	--

NG	Repair or replace harness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-556](#) ).