

## PROBLEM SYMPTOMS TABLE

### WIRELESS DOOR LOCK CONTROL

Symptom	Suspect Area	See page
All function of wireless door lock control system do not operate	2. Transmitter 3. Key unlock warning switch circuit 4. Back door ECU 5. MPX circuit 6. Body ECU	<a href="#">BE-93</a> <a href="#">DI-527</a> <a href="#">IN-28</a> <a href="#">DI-549</a> <a href="#">IN-28</a>
Lock (or unlock) function does not operate	1. Door key lock and unlock switch circuit 2. Door unlock detection switch circuit 3. Body ECU	<a href="#">DI-535</a> <a href="#">DI-533</a> <a href="#">IN-18</a>
Automatic lock function operates even if any door is opened within 30 seconds after all doors are unlocked by wireless door lock control system	1. Door courtesy switch circuit 2. Back door ECU	<a href="#">DI-539</a> <a href="#">IN-18</a>
Wireless door lock operates, but the buzzer does not sound	1. Wireless door lock buzzer circuit 2. MPX circuit 3. Back door ECU	<a href="#">DI-574</a> <a href="#">DI-549</a> <a href="#">IN-18</a>
Buzzer sound, but wireless door lock function does not operate	1. Body ECU	<a href="#">IN-18</a>
Back door window open control system does not operate	1. Back door power window motor circuit 2. Rear wiper limit switch circuit 3. Back door ECU	<a href="#">DI-570</a> <a href="#">DI-568</a> <a href="#">IN-18</a>

### REAR WIPER AND WASHER

Symptom	Suspect Area	See page
Rear wiper does not operate	1. Wiper switch circuit 2. Wiper motor circuit 3. Body ECU 4. Back door ECU	<a href="#">DI-521</a> <a href="#">DI-523</a> <a href="#">IN-18</a> <a href="#">IN-18</a>
Rear washer does not operate	1. Washer switch circuit 2. Washer motor 3. Wire harness 4. Body ECU	<a href="#">DI-521</a> <a href="#">DI-521</a> - <a href="#">IN-18</a>
Wiper does not operate when washer switch is ON	1. Wiper switch circuit 2. Body ECU	<a href="#">DI-521</a> <a href="#">IN-18</a>