

## CIRCUIT INSPECTION

<b>DTC</b>	<b>P0500/21, 23</b>	<b>Vehicle Speed Sensor Circuit</b>
------------	---------------------	-------------------------------------

## CIRCUIT DESCRIPTION

See page [DI-179](#) .

DTC No.	DTC Detection Condition	Trouble Area
P0500/21, 23	Speed signal is not input to ECM while cruise control is set	<ul style="list-style-type: none"><li>• Combination meter</li><li>• Harness or connector between ECM and vehicle speed sensor</li><li>• Vehicle speed sensor</li><li>• ECM</li></ul>

## WIRING DIAGRAM

See page [DI-179](#) .

## INSPECTION PROCEDURE

See page [DI-179](#) ..