

DTC	P1566/54	Input Signal Circuit
------------	-----------------	-----------------------------

CIRCUIT DESCRIPTION

See page [DI-481](#) .

DTC No.	DTC Detection Condition	Trouble Area
P1566/54	Input signal abnormal	ECM

INSPECTION PROCEDURE

Check and replace ECM (See page IN-28).
--