

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the diagnostic trouble code check, check the circuit listed for that code in the table below and proceed to the appropriate page.

DTC No. (See page)	Detection Item	Trouble Area
P0500/21, 23 (DI-480)	Vehicle Speed Signal Abnormal	<ul style="list-style-type: none"> • Combination meter • Harness or connector between ECM and vehicle speed sensor • Vehicle speed sensor • ECM
P1520/52 (DI-481)	Short in Stop Light Switch Circuit	<ul style="list-style-type: none"> • Stop light switch • Harness or connector between ECM and stop light switch • ECM
P1566/54 (DI-485)	Input Signal Circuit	<ul style="list-style-type: none"> • ECM