

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
SET not occurring or CANCEL occurring (DTC is Normal)	1. Input signal circuit 2. Vehicle speed sensor circuit 3. Stop light switch circuit 4. Park/neutral position switch circuit 5. ECM	DI-485 DI-480 DI-481 DI-203 IN-28
SET not occurring or CANCEL occurring (DTC is not output)	1. ECM	IN-28
Actual vehicle speed deviates above or below the set speed	1. Input signal circuit 2. ECM	DI-485 IN-28
Gear shifting occurs frequently between 3rd and O/D when driving on uphill road (Hurting)	1. ECM	IN-28
Cruise control not cancelled, even when brake pedal is depressed	1. Stop light switch circuit 2. ECM	DI-481 IN-28
Cruise control not cancelled, even when transmission is shifted to N position	1. Park/neutral position switch circuit 2. ECM	DI-203 IN-28
Cruise control not cancelled, even when clutch pedal is de- pressed	1. ECM	IN-28
Control switch does not operate (SET/COAST, ACC/RES, CANCEL not possible)	1. Cruise control switch circuit 2. ECM	DI-486 IN-28
SET possible at 40 km/h (25 mph) or less, or CANCEL does not operate at 40 km/h (25 mph) or less	1. Input signal circuit 2. ECM	DI-485 IN-28
Poor response is ACC and RES modes	1. ECM	IN-28
O/D does not resume, even though the road is not uphill	1. ECM	IN-28
DTC memory is erased	1. ECM	IN-28
DTC is not output, or is output when should not be	1. Diagnosis circuit 2. ECM	- IN-28
Cruise main indicator light remains on or falls to lighting up	1. Input signal circuit 2. ECM	DI-485 IN-28