

DTC	P1335	Crankshaft Position Sensor Circuit Malfunction (During engine running)
------------	--------------	---

CIRCUIT DESCRIPTION

Refer to DTC P0335 on page [DI-66](#) .

DTC No.	DTC Detecting Condition	Trouble Area
P1335	No crankshaft position sensor signal to ECM with engine speed 1,000 rpm or more	<ul style="list-style-type: none"> • Open or short in crankshaft position sensor circuit • Crankshaft position sensor • Crankshaft timing pulley • ECM

WIRING DIAGRAM

Refer to DTC P0335 on page [DI-66](#) .

INSPECTION PROCEDURE

Refer to DTC P0335 on page [DI-66](#) .

HINT:

Read freeze frame data using the TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.