

324

NG

- 2** Check for open in harness and connector between terminal E1 of ECM and body ground (See page [IN-28](#)).

NG

Repair or replace harness or connector.

OK

- 3** Check EFI main relay (Marking: EFI) (See page [SF-35](#)).

NG

Replace EFI main relay.

OK

- 4** Check EFI fuse (See page [DI-148](#) , step 2).

NG

Check for short in all harness and components connected to EFI fuse.

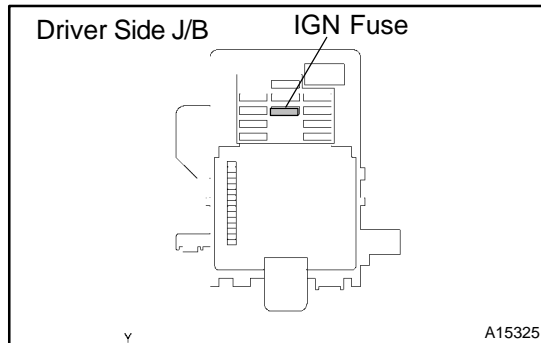
OK

- 5** Check for open harness and connector between EFI main relay (Marking: EFI) and battery, and EFI main relay and ECM (See page [IN-28](#)).

NG

Repair or replace harness or connector.

OK

6 Check IGN fuse.**PREPARATION:**

Remove the IGN fuse from the driver side J/B.

CHECK:

Check the continuity of the IGN fuse.

OK:**Continuity****NG**

Check for short in all harness and components connected to IGN fuse.

OK**7 Check ignition switch (See page [BE-12](#)).****NG**

Replace ignition switch (See page [SR-17](#)).

OK

Check for open in harness and connector between ignition switch and EFI main relay (Marking: EFI), and EFI main relay and body ground (See page [IN-28](#)).