


DTC	B2797/99	Communication Malfunction No. 1
------------	-----------------	--

CIRCUIT DESCRIPTION


This code is detected when although the communication has been performed normally, an error occurs.
(Example: Some noise is included in communication line.)

DTC No.	DTC Detection Condition	Trouble Area
B2797/99	Communication error	<ul style="list-style-type: none"> • Wire harness • Transponder key amplifier • ECM

WIRING DIAGRAM

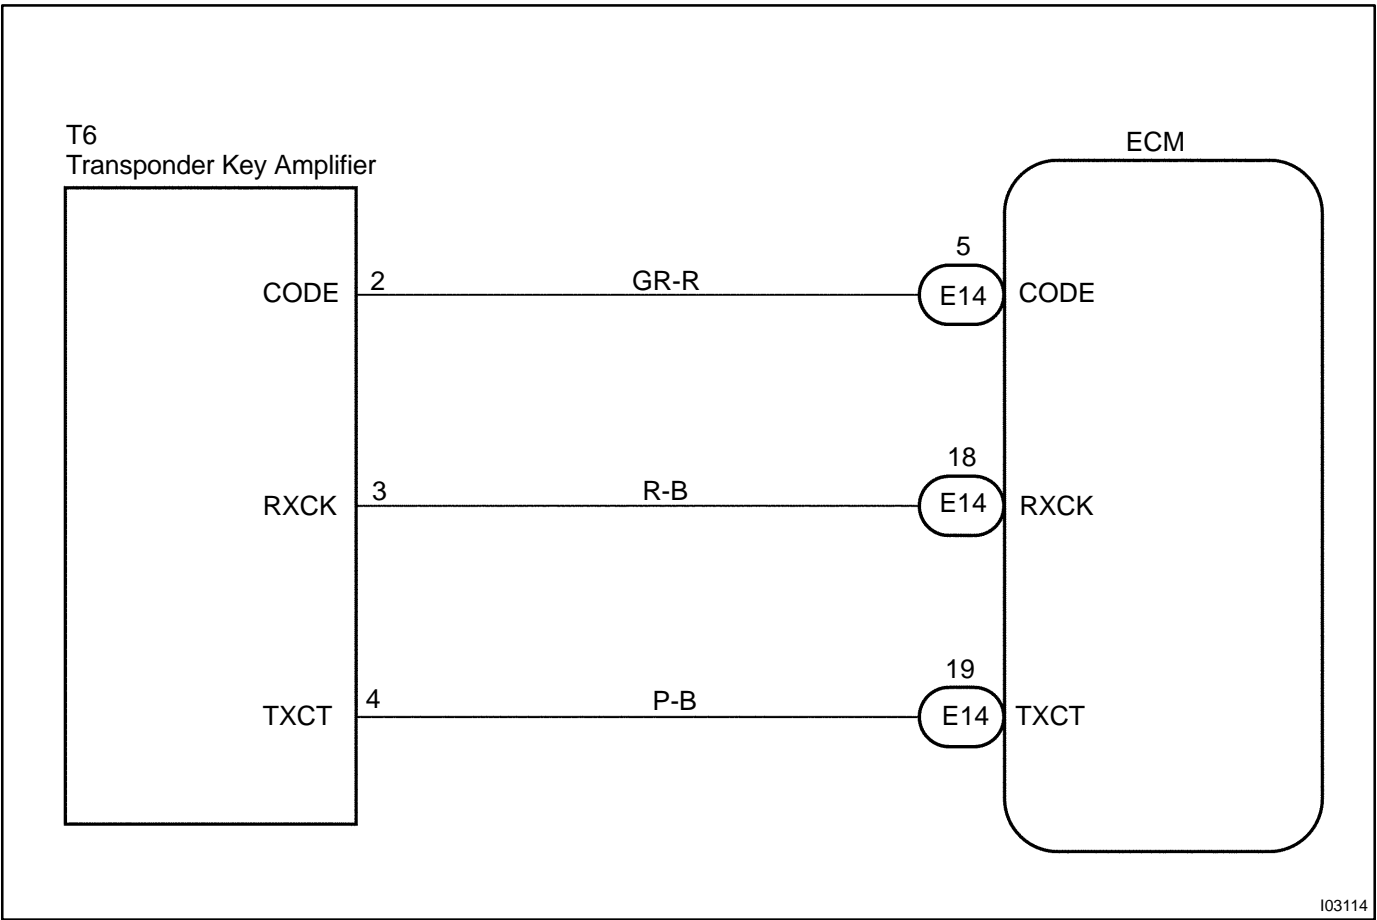

I03114

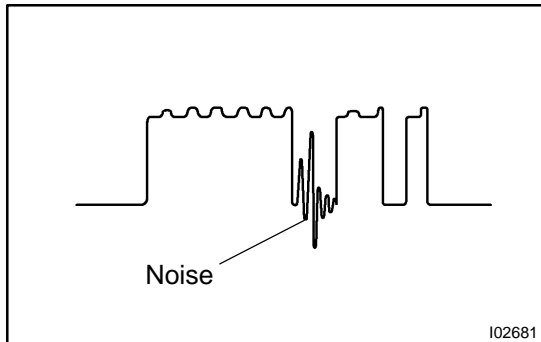INSPECTION PROCEDURE**1 Check noise.****PREPARATION:**

Insert already registered master key in the key cylinder.

CHECK:

Using an oscilloscope or TOYOTA hand-held tester, check that noise is included in terminal CODE of the ECM.

OK:

No noise is detected.

NG**Try to find cause of noise and remove it.****OK****2 Does it operate normally after replacement of transponder key amplifier?****Yes****Replace transponder key amplifier.****No****Replace ECM.**