


<b>DTC</b>	<b>B2798/99</b>	<b>Communication Malfunction No. 2</b>
------------	-----------------	--

# CIRCUIT DESCRIPTION

DTC No.	DTC Detection Condition	Trouble Area
B2798/99	Communication error	<ul style="list-style-type: none"> <li>• Key</li> <li>• Transponder key coil</li> <li>• Transponder key amplifier</li> <li>• Wire harness</li> <li>• ECM</li> </ul>

# WIRING DIAGRAM

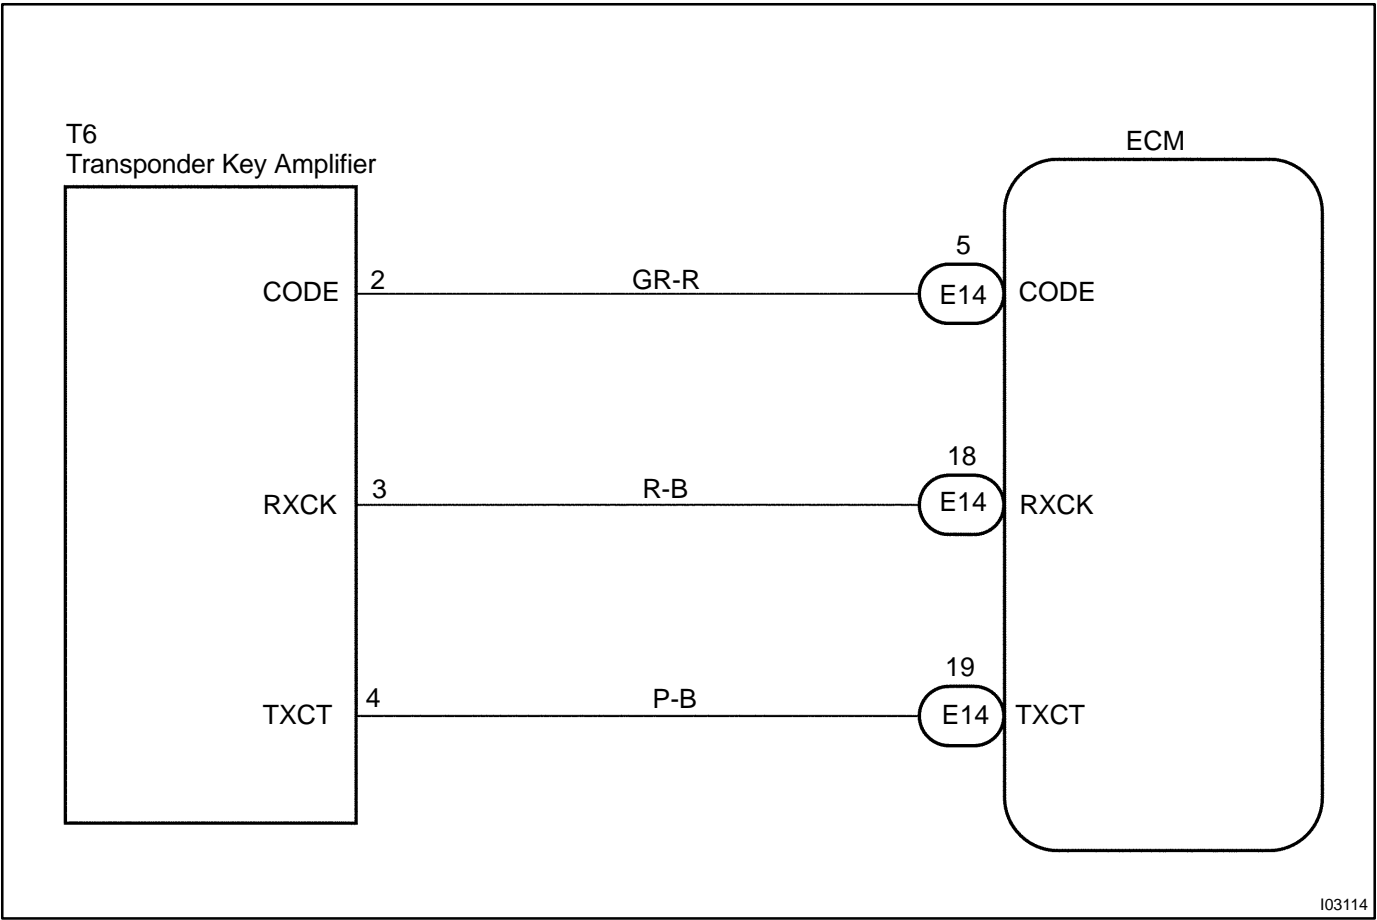

I03114

**INSPECTION PROCEDURE**

1	Check transponder key coil (See page <a href="#">BE-172</a> ).
---	--

**NG**

Replace transponder key coil.

**OK**

2	Check harness and connector between transponder key amplifier and ECM (See page <a href="#">IN-28</a> ).
---	--

**NG**

Repair or replace harness or connector.

**OK**

3	Does it operate normally after replacement of transponder key amplifier?
---	--

**Yes**

Replace transponder key amplifier.

**No**

Replace ECM.