


TERMINALS OF ECU

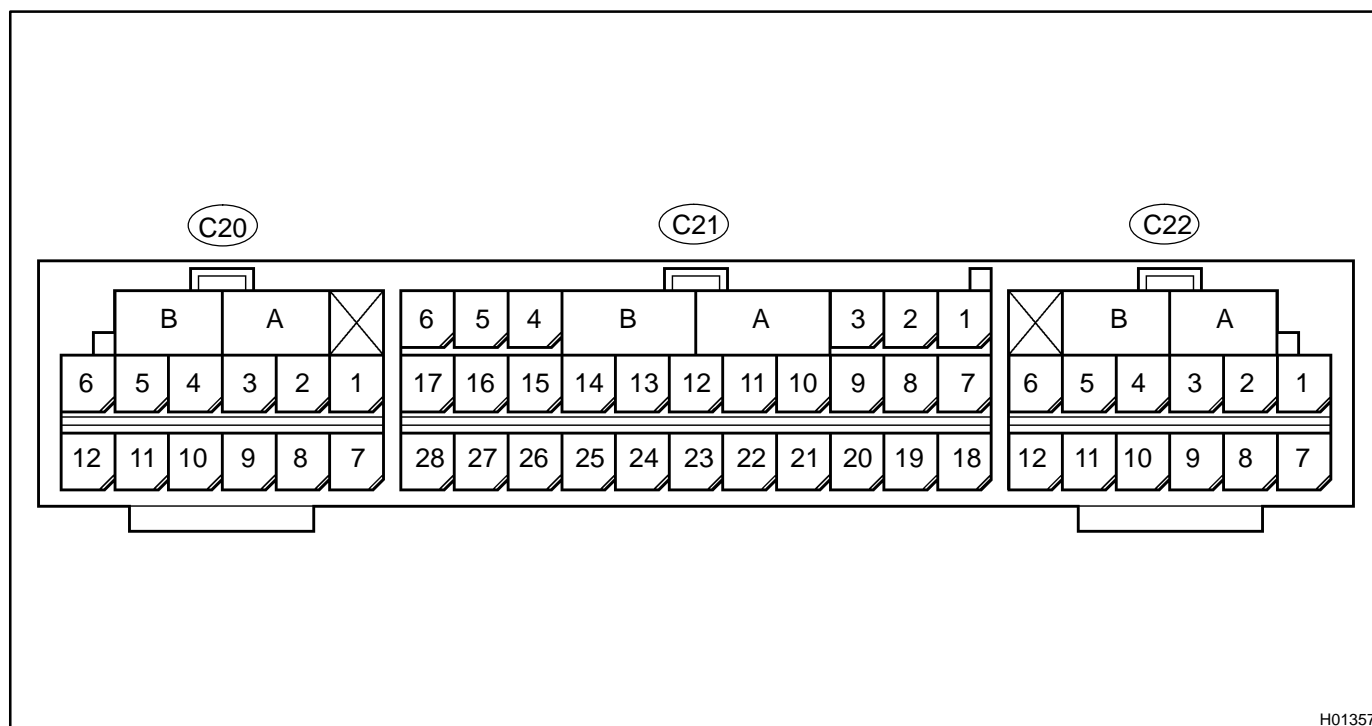

H01357

No.	Symbol	Terminal Name
A	-	Electrical Connector Check Mechanism
B	-	Electrical Connector Check Mechanism
C20 - 1	PL-	Squib (Seat Belt Pretensioner, LH)
C20 - 2	PL+	Squib (Seat Belt Pretensioner, LH)
C20-11	LBE+	Seat Belt Buckle Switch (LH)
C21 - 3	LA	SRS Warning Light
C21 - 5	IG2	Power Source (IGN Fuse)
C21 - 6	IG1	Power Source (ECU-IG Fuse)
C21 - 9	+SR	Front Airbag Sensor (RH)
C21 - 10	P+	Squib (Passenger)
C21 - 11	P-	Squib (Passenger)
C21 - 12	SIL	Diagnosis
C21 - 13	D-	Squib (Driver)
C21 - 14	D+	Squib (Driver)
C21 - 15	+SL	Front Airbag Sensor (LH)
C21 - 19	Tc	Diagnosis
C21 - 20	-SR	Front Airbag Sensor (RH)
C21 - 26	-SL	Front Airbag Sensor (LH)
C21 - 27	E1	Ground
C21 - 28	E2	Ground
C22 - 5	PR+	Squib (Seat Belt Pretensioner, RH)
C22 - 6	PR-	Squib (Seat Belt Pretensioner, RH)
C22 - 8	RBE+	Seat Belt Buckle Switch (LH)