



INSTALLATION

1. INSTALL ENGINE ASSEMBLY IN VEHICLE

- (a) Attach the engine hoist chain to the engine hangers.
- (b) Lower the engine assembly into the engine compartment.

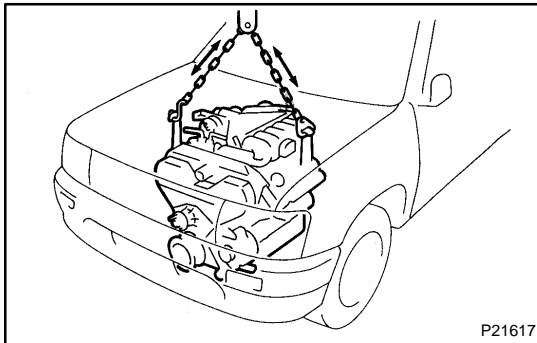


- (c) Keep the engine level, and align the RH and LH mountings and body mountings.
- (d) Attach the RH and LH mounting insulators to the body mountings, and temporarily install the 4 bolts and nuts.
- (e) Remove the engine chain hoist from the engine.
- (f) Remove the bolt and engine hanger No.2.
- (g) w/ A/C:
Install the bolt, and connect the A/C compressor wire.

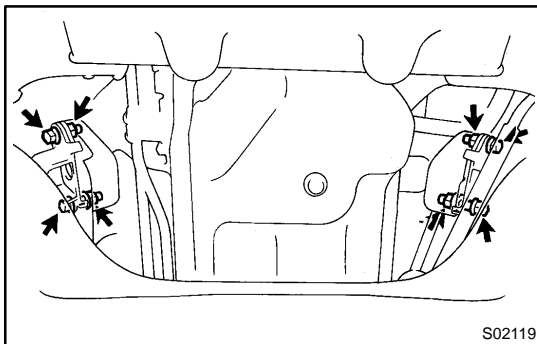

2. TIGHTEN RH AND LH ENGINE MOUNTING INSULATOR BOLTS AND NUTS


Tighten the 4 bolts and nuts holding the mounting insulators to the body mountings.

Torque: 38 N·m (387 kgf·cm, 28 ft·lbf)

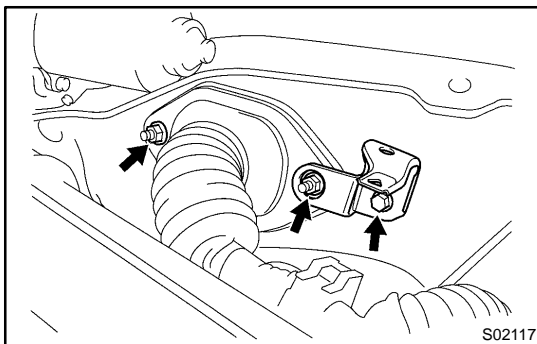


3. CONNECT ENGINE WIRE TO CABIN


- (a) Push in the engine wire through the cowl panel.
- (b) Install the 2 nuts.
- (c) Install the bolt and bracket.

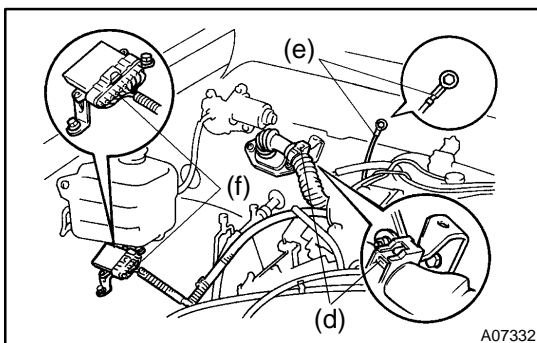

- (d) Connect the engine wire clamp.
- (e) Connect the round strap.
- (f) Connect the igniter connector.

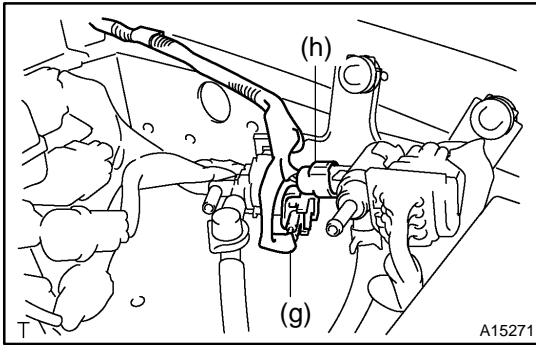


- (g) Connect the VSV connector for the EVAP.
- (h) Connect the VSV connector for the CCV and clamp.
- (i) Connect the 5 connectors to the ECM.
- (j) Connect the 2 cassette connectors.
- (k) Install the ECM with the 2 bolts.

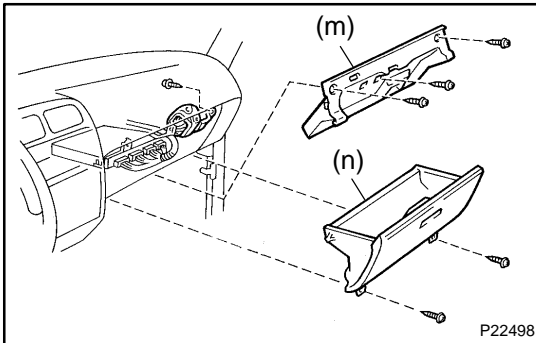


- (l) Install the lower finish No.2 panel.
- (m) Install the glove compartment door.

4. **CONNECT GENERATOR WIRE (See page CH-15)**

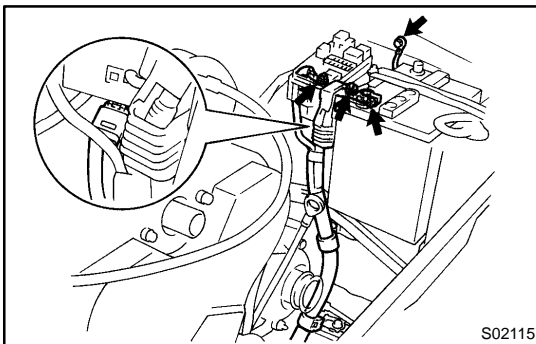


5. **CONNECT STARTER WIRE AND CONNECTORS**

- (a) Connect the 3 starter wire clamps and connector.
- (b) Install the 2 nuts, and connect the positive (+) terminal cable to battery.
- (c) Connect the ground strap with the bolt.
- (d) Connect wire to the relay block No.2 with the nut.

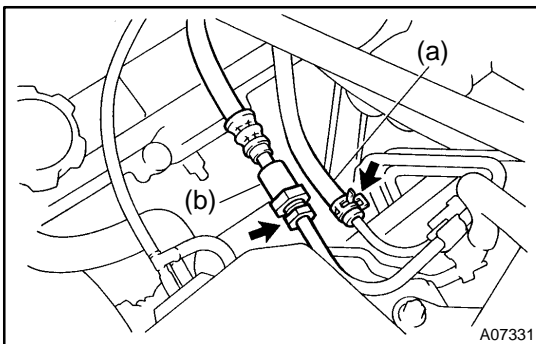


6. **CONNECT HOSES**

- (a) Connect the fuel return hose.
- (b) Connect the fuel inlet hose. (See page SF-1)

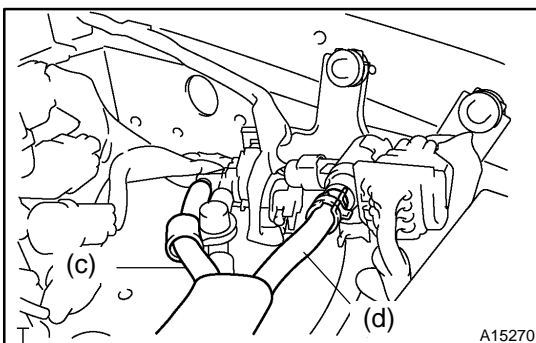

- (c) Connect the EVAP hose.
 - (d) Connect the CCV hose.
- #### 7. **CONNECT HEATER HOSES**

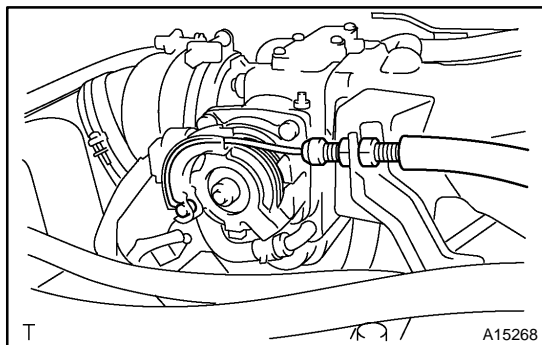

8. CONNECT ACCELERATOR CABLE TO THROTTLE BODY
9. INSTALL FAN WITH FLUID COUPLING AND FAN PULLEYS
10. INSTALL AIR CLEANER ASSEMBLY
11. INSTALL RADIATOR ASSEMBLY (See page [CO-23](#))
12. FILL WITH ENGINE OIL
13. FILL WITH ENGINE COOLANT
14. INSTALL ENGINE UNDER COVER
15. INSTALL TRANSMISSION (See page [AT-27](#))
16. INSTALL HOOD
17. PERFORM ROAD TEST

Check for abnormal noise, shock, slippage, correct shift points and smooth operation.

18. RECHECK ENGINE COOLANT AND ENGINE OIL LEVELS