

IGNITION TIMING INSPECTION

EM01F-05

1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

2. CONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL

- Connect a TOYOTA hand-held tester or OBDII scan tool to the DLC3.
- Please refer to the TOYOTA hand-held tester or OBDII scan tool operator's manual for further details.


3. CONNECT TIMING LIGHT TO ENGINE

4. CHECK IDLE SPEED

- Race the engine speed at 1,000 rpm for approx. 5 seconds.
- Check the idle speed.


Idle speed: 700 ± 50 rpm

(Transmission in neutral position and A/C OFF)

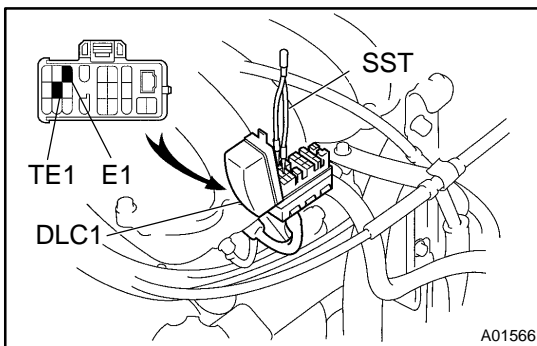

5. INSPECT IGNITION TIMING

- Using SST, connect terminals TE1 and E1 of the DLC1.
SST 09843-18020

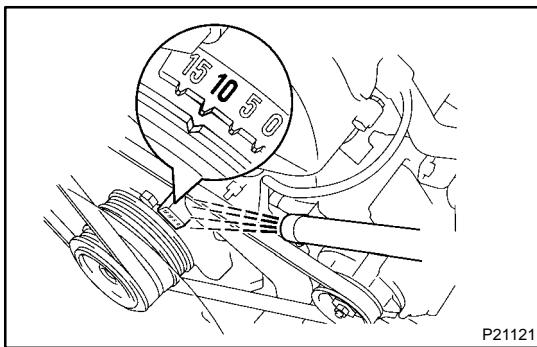

- Using a timing light, check the ignition timing.

Ignition timing: 8 - 12° BTDC @ idle
(Transmission in neutral position)

- Remove the SST from the DLC1.

SST 09843-18020

6. FURTHER CHECK IGNITION TIMING

Ignition timing: 3 - 19° BTDC @ idle
(Transmission in neutral position)

HINT:

The timing mark moves in a range between 3° and 19°.

7. DISCONNECT TIMING LIGHT FROM ENGINE

8. DISCONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL