



INSTALLATION

1. INSTALL CAMSHAFT POSITION SENSOR

- (a) Connect the cord clamp to the timing belt cover.
- (b) Install the camshaft position sensor with bolt.
Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)
- (c) Connect the camshaft position sensor connector.

2. INSTALL NO.2 TIMING BELT COVER

(See page [EM-19](#))