



## REMOVAL

1. **REMOVE NO.2 TIMING BELT COVER**  
(See page [EM-13](#) )
2. **REMOVE CAMSHAFT POSITION SENSOR**
  - (a) Disconnect the camshaft position sensor connector.
  - (b) Remove the bolts and camshaft position sensor.
  - (c) Disconnect the cord clamp from the No.3 timing belt cover.