



**INSPECTION**

**NOTICE:**  
"Cold" and "Hot" in these sentences express the temperature of the sensors themselves. "Cold" is from -10°C (14°F) to 50°C (122°F) and "Hot" is from 50°C (122°F) to 100°C (212°F).

**INSPECT CRANKSHAFT POSITION SENSOR RESISTANCE**  
Using an ohmmeter, measure the resistance between terminals.

**Resistance:**

|      |                 |
|------|-----------------|
| Cold | 1,630 - 2,740 Ω |
| Hot  | 2,065 - 3,225 Ω |

If the resistance is not as specified, replace the crankshaft position sensor.