



INSTALLATION

1. INSTALL CRANKSHAFT POSITION SENSOR

- (a) Install the crankshaft position sensor with bolt.

Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)

- (b) Connect the crankshaft position sensor connector.

2. INSTALL ENGINE UNDER COVER