



## CRANKSHAFT POSITION SENSOR REMOVAL

IG011-03

1. REMOVE ENGINE UNDER COVER
2. REMOVE CRANKSHAFT POSITION SENSOR
  - (a) Disconnect the crankshaft position sensor connector.
  - (b) Remove the bolt crankshaft position sensor.