



## INSTALLATION

### 1. INSTALL IGNITION COILS

- (a) Install the 3 ignition coil to LH cylinder head with 3 bolts.

**Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)**

- (b) Connect the 3 connector to the ignition coil.

### 2. CONNECT HIGH-TENSION CORDS TO IGNITER

(See page [IG-1](#) )

### 3. INSTALL AIR CLEANER HOSE