


## REMOVAL

1. REMOVE AIR CLEANER HOSE
2. DISCONNECT HIGH-TENSION CORDS FROM IGNITION COILS (See page [IG-1](#))

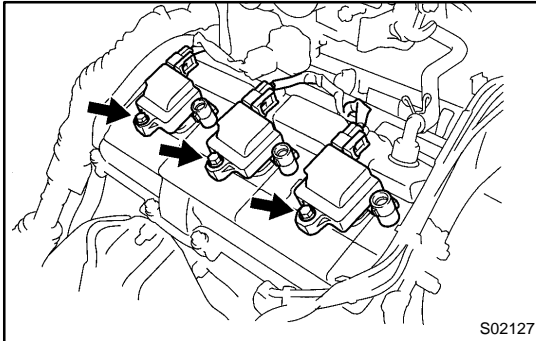

3. REMOVE IGNITION COILS

- (a) Disconnect the 3 connectors from the ignition coils.
- (b) Remove the 3 bolts and 3 ignition coils from the LH cylinder head.

**HINT:**

Arrange the ignition coils in correct order.