


## VEHICLE LIFT AND SUPPORT LOCATIONS

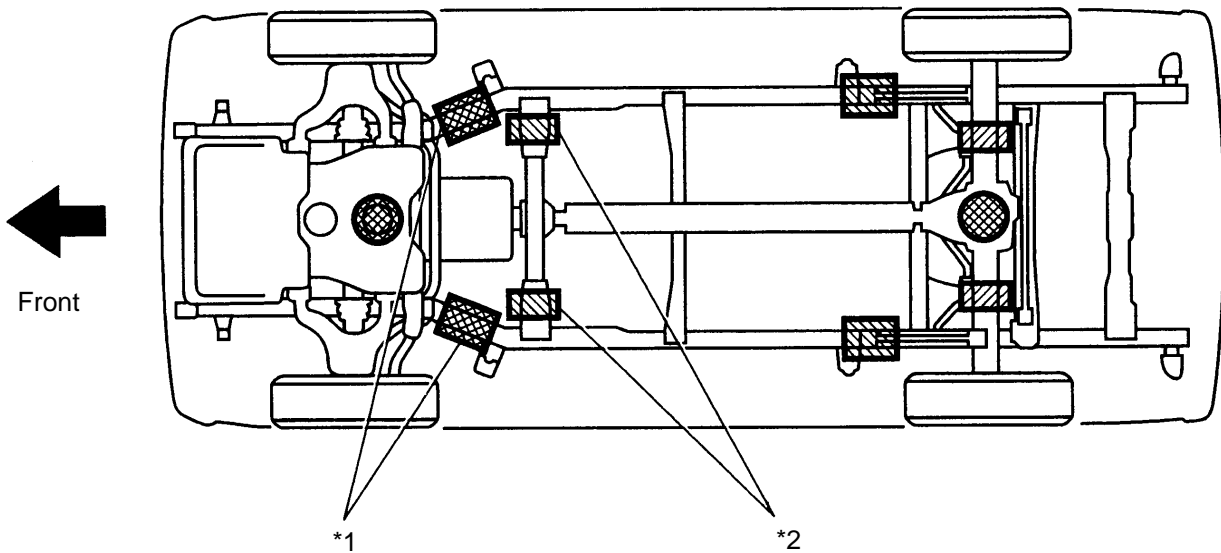

**JACK POSITION** . . . . . 

Front . . . . . Center of crossmember

Rear . . . . . Center of rear axle housing

**CAUTION:** When jacking-up the front and rear make sure the car is not carrying any extra eight.

### SUPPORT POSITION

Safety stand . . . . . 

Swing arm type lift . . . . . 

\*1: Support position when equipping without side step.

\*2: Support position when equipping with side step.

B01542