



INSTALLATION

1. INSTALL OIL COOLER

- (a) Clean the oil cooler contact surface on the oil cooler mounting.
- (b) Place a new O-ring to the oil cooler.
- (c) Apply a light coat of engine oil on the threads and under the head of the union bolt.

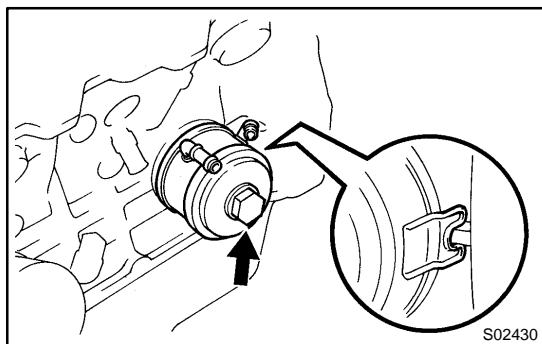

- (d) Install the oil cooler, New gasket and union bolt.
Torque: 59 N·m (600 kgf-cm, 43 ft-lbf)

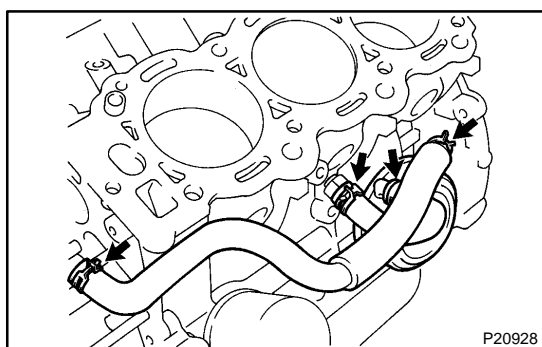

2. CONNECT OIL COOLER HOSES

Connect the No.1 and No.2 oil cooler hoses.

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR COOLANT AND ENGINE OIL LEAKS