



## REMOVAL

### REMOVE PROPELLER SHAFT

- (a) Place matchmarks on the propeller shaft and differential flange.
- (b) Remove the 4 nuts, bolts and washers.  
**Torque: 74 N·m (750 kgf-cm, 54 ft-lbf)**
- (c) Pull the yoke from the transmission.
- (d) Insert SST in the transmission to prevent oil leakage.  
SST 09325-20010

