

REMOVAL


NOTICE:

Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary (If the IC terminals are touched, the IC may be destroyed by static electricity.).

HINT:

For step 1 to 6, refer to page [BO-66](#).

1. REMOVE UPPER CONSOLE PANEL
2. REMOVE PARKING BRAKE HOLE COVER
3. REMOVE REAR CONSOLE BOX
4. REMOVE CONSOLE PANEL GARNISH
5. REMOVE ASH RECEPTACLE BOX
6. REMOVE CENTER CLUSTER FINISH PANEL

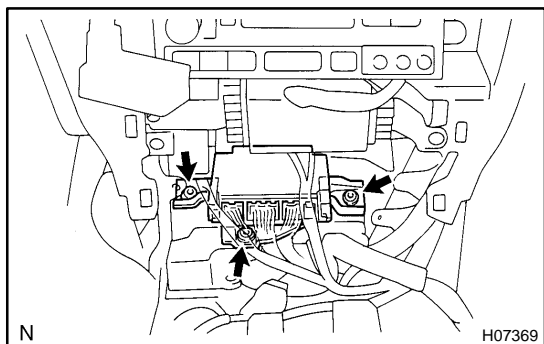

7. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the airbag sensor connector.

NOTICE:

Remove the connector with the airbag sensor assembly installed.

- (b) Using a torx wrench, remove the 3 screws and airbag sensor assembly.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)