



FRONT AIRBAG SENSOR COMPONENTS

RS0BP-05


Air Cleaner Assembly with Air Hose

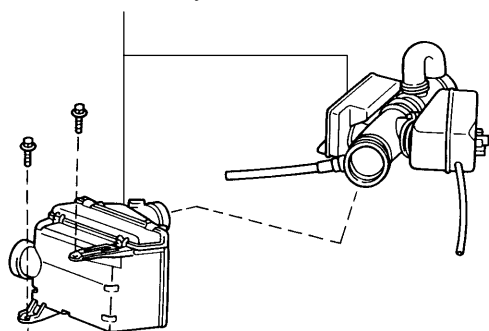

Hold Down Clamp

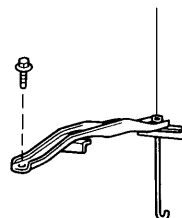


Battery

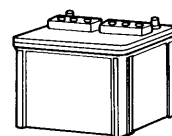



Battery Tray



Front Airbag Sensor RH

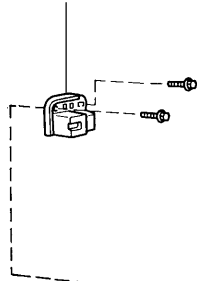

Front Airbag Sensor LH

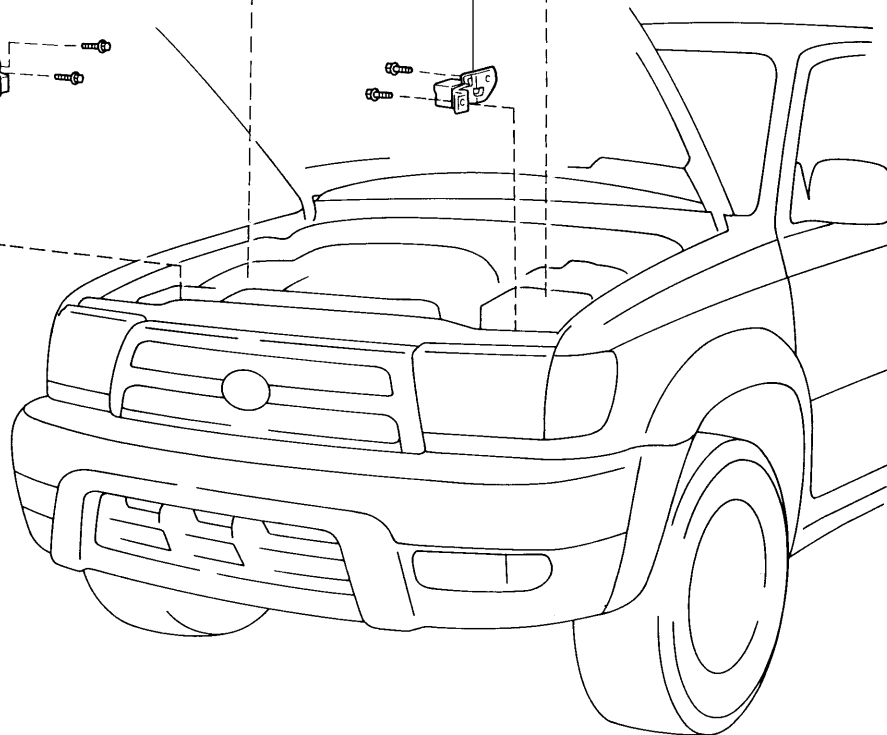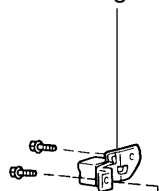

N·m (kgf·cm, ft·lbf) : Specified torque

N

H07358