



## INSTALLATION

### 1. INSTALL FRONT AIRBAG SENSOR

- (a) Install the front airbag sensor with the arrow on the sensor facing toward the front of the vehicle.

**Torque: 20 N·m (205 kgf-cm, 15 ft-lbf)**

#### NOTICE:

- Connection of the connector is done after the sensor has been installed.
  - Make sure the sensor is installed with the specified torque.
  - If the sensor has been dropped, or there are cracks, dents or other defects in the case, brackets or connector, replace the removed sensor with a new one.
  - The front sensor is equipped with an electrical connection check mechanism. Be sure to lock this mechanism securely when connecting the connector. If the connector is not securely locked, a malfunction code will be detected by the diagnostic system.
- (b) Connect the front airbag sensor connector.

### 2. INSTALL REMOVED PARTS