


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON or ACC position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

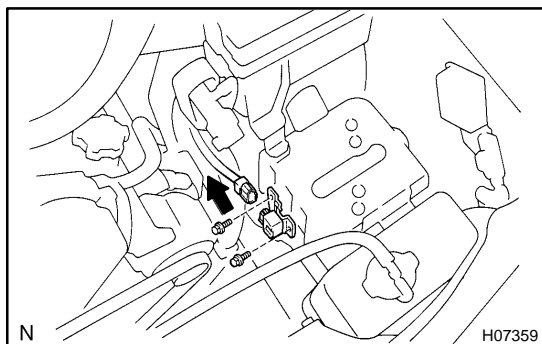

1. LH:


REMOVE FRONT AIRBAG SENSOR

- Remove the hold down clamp, battery and battery tray.
- Disconnect the front airbag sensor connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- Remove the 2 bolts and front airbag sensor.

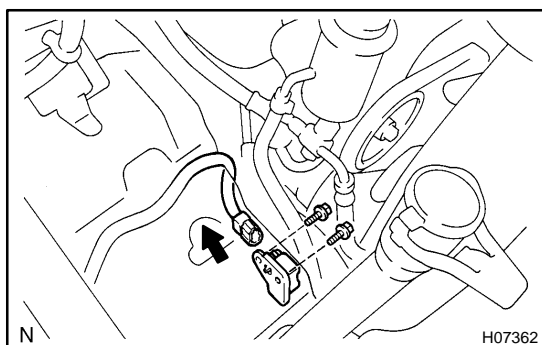

2. RH:

REMOVE FRONT AIRBAG SENSOR

- Remove the air cleaner assembly with air hose.
- Disconnect the front airbag sensor connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- Remove the 2 bolts and front airbag sensor.