


## INSTALLATION


### NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

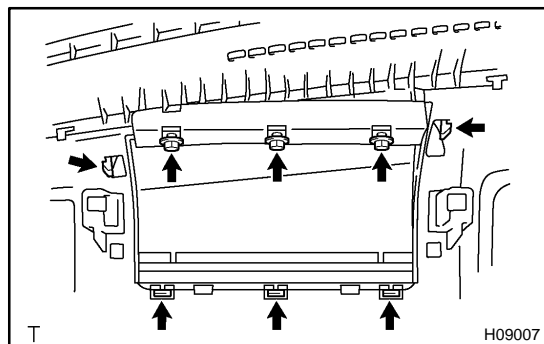

### 1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY


- (a) Install the airbag door to the instrument panel and instrument panel stay with the 3 bolts.

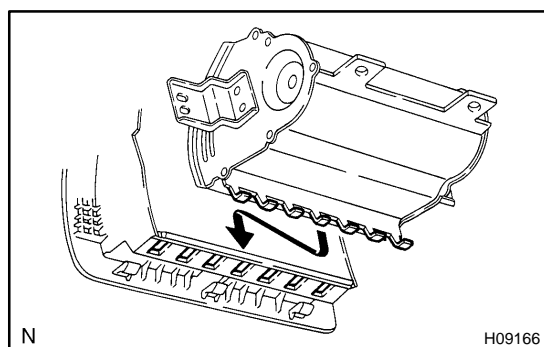

- (b) Install the front passenger airbag assembly to the airbag door.

### CAUTION:

- Insert the 7 claws of the passenger airbag assembly into the holes in the airbag door securely.
- Make sure that no foreign objects are trapped between the airbag door and bag, and within the module.

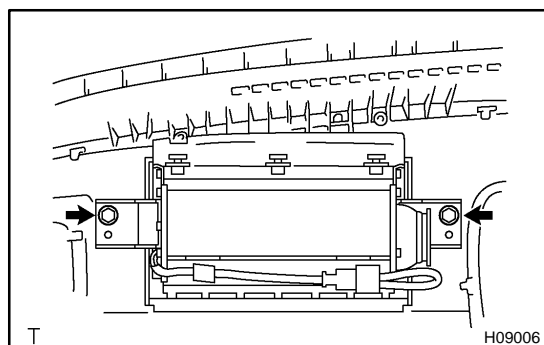


- (c) Install the front passenger airbag assembly to the instrument panel with 2 bolts.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**

### NOTICE:

If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.

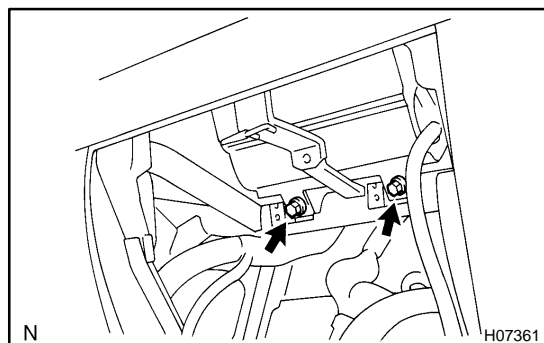

### 2. INSTALL INSTRUMENT PANEL


(See page [BO-76](#))

Install the 2 bolts to instrument panel reinforcement.

**Torque: 19 N·m (195 kgf·cm, 14 ft-lbf)**

### NOTICE:

- Make sure the front passenger airbag assembly is installed with the specified torque.
- When installing the instrument panel, take care that the airbag wire harness does not interfere with other parts and is not pinched between other parts.

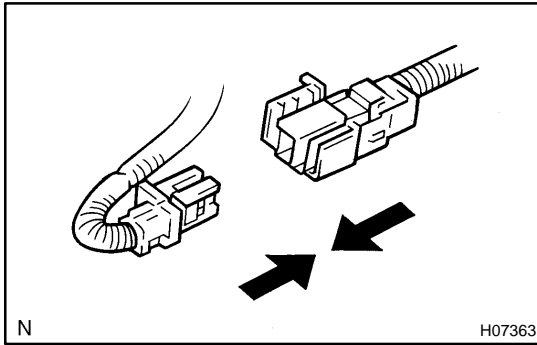**3. CONNECT AIRBAG CONNECTOR**

- (a) Connect the airbag connector.
- (b) Install the glove compartment door.