

REMOVAL

NOTICE:


- If the wiring connector of the SRS is disconnected and the ignition switch is in ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

1. DISCONNECT AIRBAG CONNECTOR

- (a) Remove the glove compartment door.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

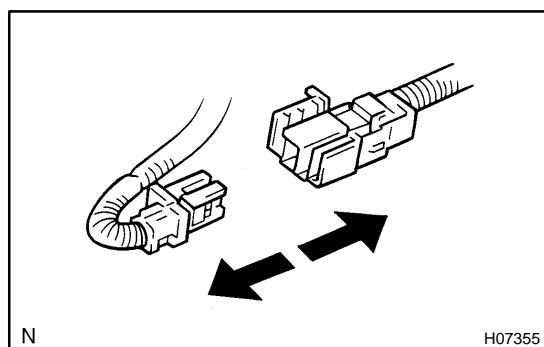

- (b) Disconnect the front passenger airbag connector.


2. REMOVE INSTRUMENT PANEL

(See page [BO-69](#))

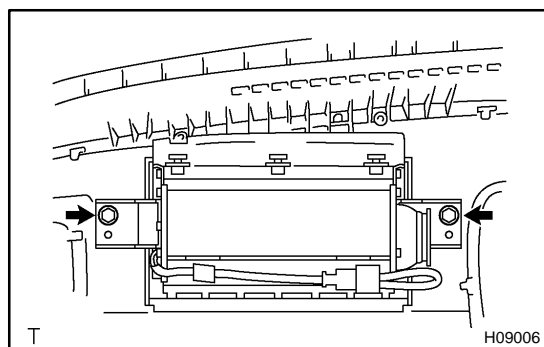

3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 2 bolts and front passenger airbag assembly.

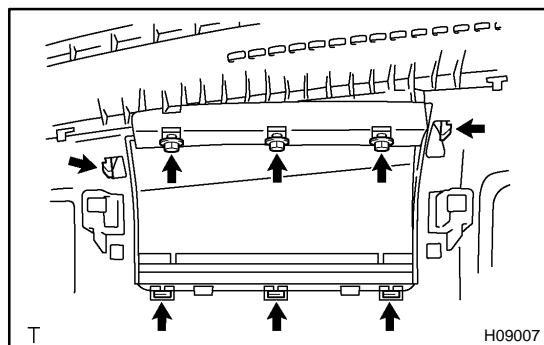

- (b) Remove the 3 bolts and instrument panel stay, and pry up the 5 clips shown in the illustration.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing downward.
- Never disassemble the front passenger airbag assembly.