

## INSTALLATION

Installation is in the reverse order of removal (See page [SA-10](#) ).

HINT:

After installation, check the ABS speed sensor signal (See page [DI-224](#) ) and front wheel alignment (See page [SA-5](#) ).