

## INSTALLATION

Installation is in the reverse order of removal (See page [SA-73](#) ).

HINT:

After installation, check the front wheel alignment (See page [SA-5](#) ).