



## REPLACEMENT

### 1. REMOVE BUSHING

- (a) Using a chisel and hammer, pry up the flange of the bushing.

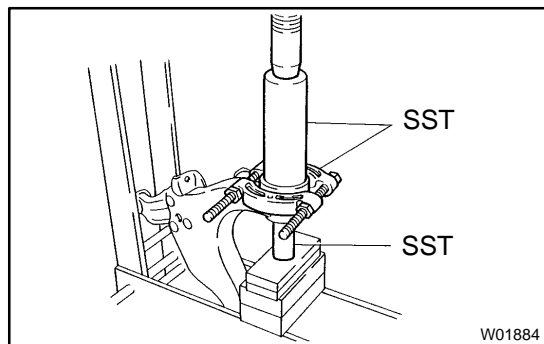

- (b) Using SST and a press, remove the bushing.  
SST 09613-26010, 09632-36010, 09950-00020

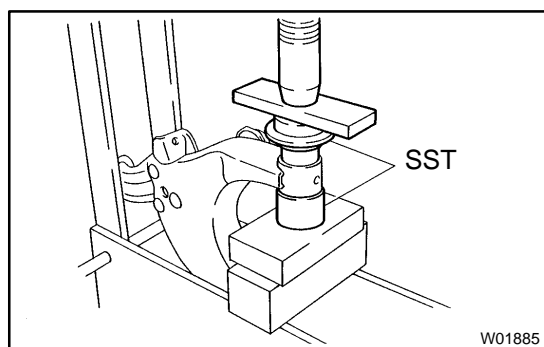

### 2. INSTALL NEW BUSHING

Using SST and a press, install a new bushing.

SST 09316-2001 1, 09710-30021 (09710-03121)