



## DISASSEMBLY

### REMOVE SUSPENSION SUPPORT AND COIL SPRING

- (a) Using SST, compress the coil spring until there is a clearance on both ends.

SST 09727-00060, 09727-30021

#### NOTICE:

##### To avoid damage to SST:

- Set SST arms to allow clearance to hold a 8-roll coil between them.
  - Do not compress the coil spring more than necessary.
  - Do not use an impact wrench.
- (b) Remove suspension support center nut.
- (c) Remove the 2 retainers, cushion, suspension support and coil spring.