


## REMOVAL

### 1. REMOVE FRONT WHEEL

Torque: 110 N·m (1,150 kgf·cm, 83 ft·lbf)

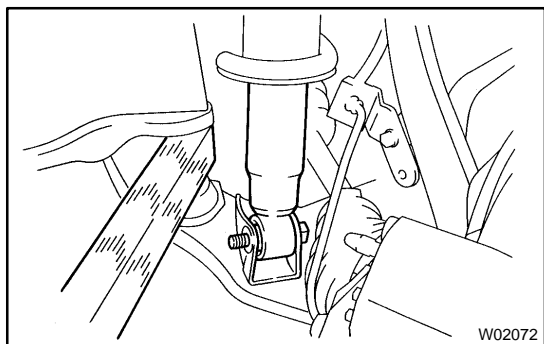

### 2. DISCONNECT SHOCK ABSORBER FROM LOWER SUSPENSION ARM

- (a) Loosen the bolt and remove the shock absorber lower nut and washer.

Torque: 135 N·m (1,400 kgf·cm, 101 ft·lbf)

#### HINT:

At the time of installation, after stabilizing the suspension, torque the bolt.

- (b) With lowering the lower suspension arm, remove the bolt and disconnect the shock absorber.

### 3. REMOVE SHOCK ABSORBER WITH COIL SPRING

Remove the 3 nuts, shock absorber with coil spring.

Torque: 64 N·m (650 kgf·cm, 47 ft·lbf)

