


REMOVAL

1. REMOVE STEERING KNUCKLE WITH AXLE HUB (See page [SA-10](#))
2. REMOVE UPPER BALL JOINT
 - (a) Remove the wire and boot.
 - (b) Using a snap ring expander, remove the snap ring.

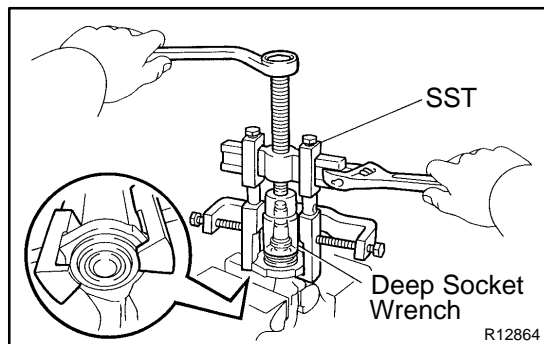

- (c) Using SST and a deep socket wrench, remove the upper ball joint.

SST 09950- 40011 (09951- 04010, 09952- 04010, 09953- 04020, 09954- 04010, 09955- 04031, 09957-04010, 09958-04011)