



FRONT WHEEL HUB BOLT REPLACEMENT

SA050-01

1. REMOVE FRONT WHEEL
2. REMOVE BRAKE LINE BRACKET FROM STEERING KNUCKLE
3. REMOVE BRAKE CALIPER AND DISC (See page [BR-16](#))

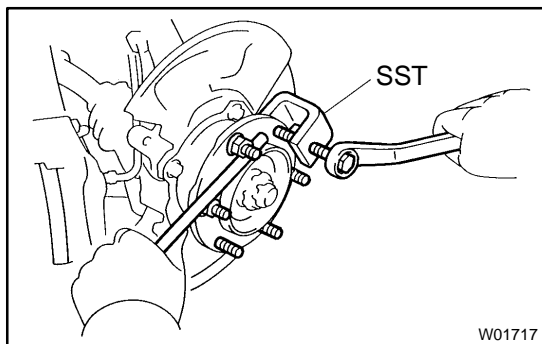

4. REMOVE HUB BOLT
Using SST, remove hub bolt.
SST 09650-1701 1

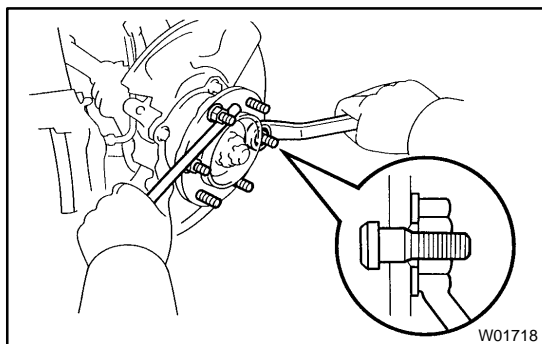

5. INSTALL HUB BOLT
Install a washer and nut to the hub bolt, as shown in the illustration, and install the hub bolt with torquing the nut.
6. INSTALL DISC AND BRAKE CALIPER
(See page [BR-20](#))
7. INSTALL BRAKE LINE BRACKET FROM STEERING KNUCKLE
Torque: 28 N·m (285 kgf·cm, 21 ft·lbf)
8. INSTALL FRONT WHEEL
Torque: 110 N·m (1,150 kgf·cm, 83 ft·lbf)